


# Instructions for use Fitting tool Quick mounting cabinet hinges 510 580

### Instructions for use

Determine drillings in frame

- a) Adjust joint on template drill B 580.
- b) Put door on frame, consider base for template drill and pull tight.

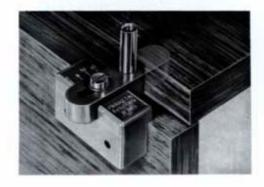

Example for template drill set B 580 for quick mounting cabinet hinge 580.

Drill in frame

Push template drill into drilling and drill  $\phi$  5,2 x 30 mm = 13/64" x 3/16" deep

### Tool

Drill bit  $\phi$  5,2 mm = 13/64" — available from specialized dealers — PRĂMETA tool set 1 set = 3 pieces template drills B 580


### Mass production

Screw template drills on wood board. Mount drill sets on trimming templates  $\phi$  8 mm = 5/16".

### Fitting tool

	for quick mounting cabinet hinges	with trimming of door edge
Template drill set B 580	510-19	100
	580-16 580-19	1/1 1/2 1/2 min 1/1 2/1 2/1 2/1 2/1 2/1 2/1 2/1 2/1 2/1

### Handling

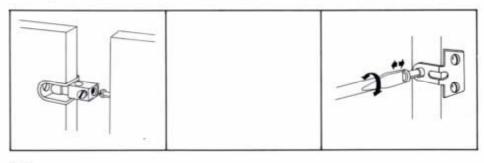


# 510

## Mount door

Push hole in upper hinge on threaded bolt. Fasten clamping screw. Push in middle and lower hinges and fasten adjusting screw.

# Depth adjustment

Turn threaded bolt out of or into frame.

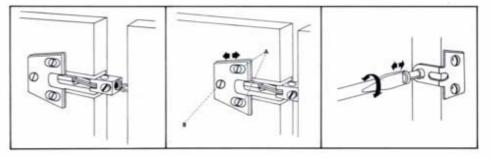

# 580

# Mount door

Push hole in upper hinge on threaded bolt. Fasten clamping screw. Push in middle and lower hinges and fasten adjusting screw.

### Side adjustment

Release adjusting screw A at flange, position flange into slots and tighten screws again. Then fasten screw B.

### Depth adjustment

Turn threaded bolt out of or into frame.