
UNIVERSAL

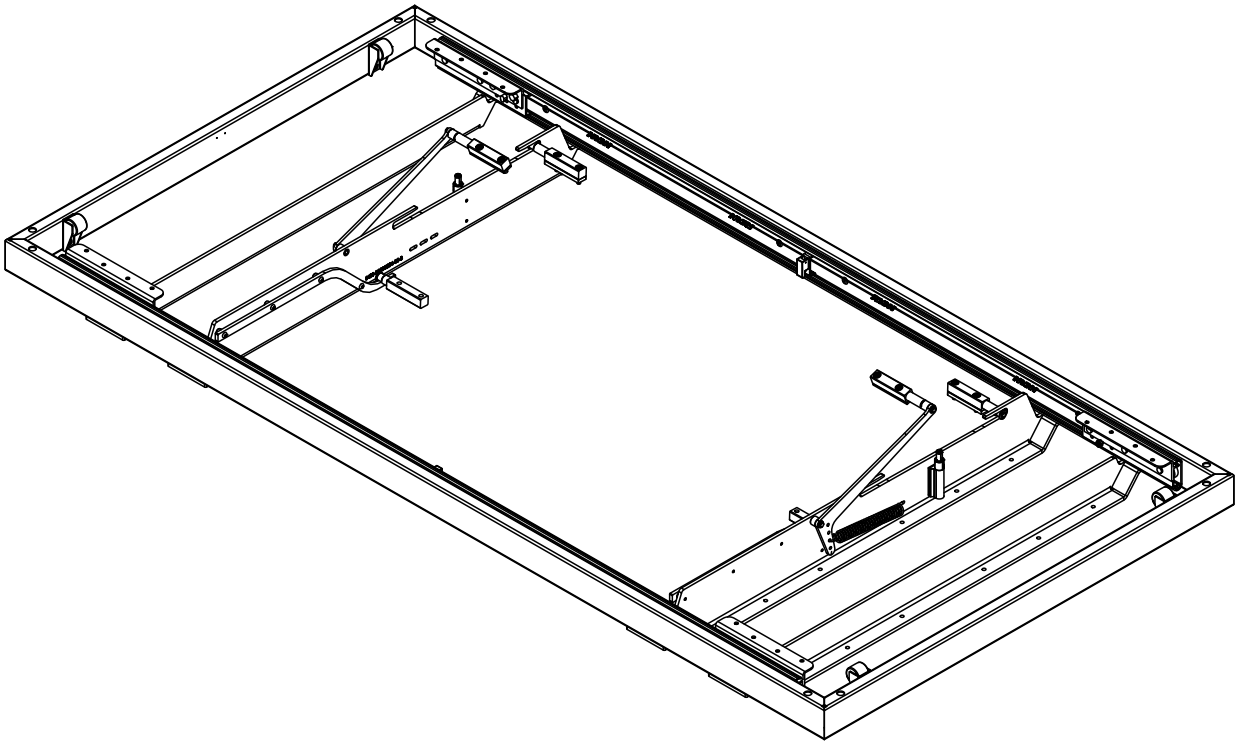

MUVV

Contacts

+351 255 873 040
info@muvv.pt

Address

R. da Zona Industrial, 420
4580-565 Lordelo, Paredes · Portugal

UNIVERSAL

CONTENT

General Safety Warnings	04
Components	06
Technical Information	12
Pre-Start	14
Steps	15
Movement Test	31

GENERAL SAFETY WARNINGS

SAFETY CONSIDERATIONS

Before you begin installing, using, or maintaining this product, please read these instructions carefully. Improper installation, adjustments, modifications, service, maintenance, or misuse can lead to serious hazards that could cause injury or property damage.

To ensure safe installation and use consult a qualified installer, service agency, or your distributor for help. If modifying the product, the qualified installer or agency must use parts and accessories authorized by the manufacturer. Refer to the specific instructions included with any kits or accessories you purchase.

Always follow all safety codes and regulations. Wear safety glasses, protective clothing, and gloves during installation. Detailed instructions and important warnings are included in the product manual and on labels attached to the unit. Please read these thoroughly and follow all safety precautions.

Furniture assembly requires proper skills for safety. It's recommended that a competent person handle this task. No liability will be accepted for injury or damage caused by furniture that has not been installed or assembled correctly, nor for improper use of the product that may jeopardize its operation and the integrity of the components.

Safety labels use specific words to communicate the level of risk involved. DANGER indicates the presence of an extremely serious hazard which will result in severe personal injury or death. WARNING indicates a potentially hazardous situation, not following this label could result in serious injury or death. CAUTION highlights an unsafe practice that may cause minor injuries or damage to the product or surrounding property.

If you have any questions, please consult the manufacturer.

CAUTION

CUT HAZARD

Sharp sheet metal parts and screws can cause cuts. To avoid injury be aware of sharp edges on the product, especially when handling parts or reaching inside the unit. Wear appropriate clothing, safety glasses, and gloves for protection. We strive to minimize sharp edges, but it's important to take these precautions for your safety.

WARNING

Use a clean, non-rough surface during the assembly process to prevent scratches or any other type of damage to the product.


This product is heavy. Use caution when lifting to avoid injury or damage. Consider getting help from another person if necessary. For safe installation choose a stable and level surface to mount the unit. Avoid uneven or rickety tables or slanted surfaces. An unstable installation can cause the unit to fall, potentially resulting in personal injury and property damage.


To ensure greater stability and security of the table, we recommend applying glue to all the screws during assembly. This helps prevent the screws from coming loose in situations such as transporting or moving the table. Make sure you use a suitable glue for fixing screws.


MAINTENANCE


To maintain stability and prevent accidents, regularly inspect all fasteners for looseness and tighten them if needed.

UNIVERSAL

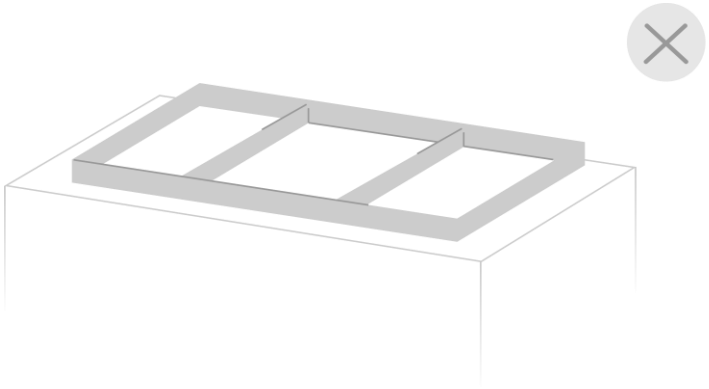

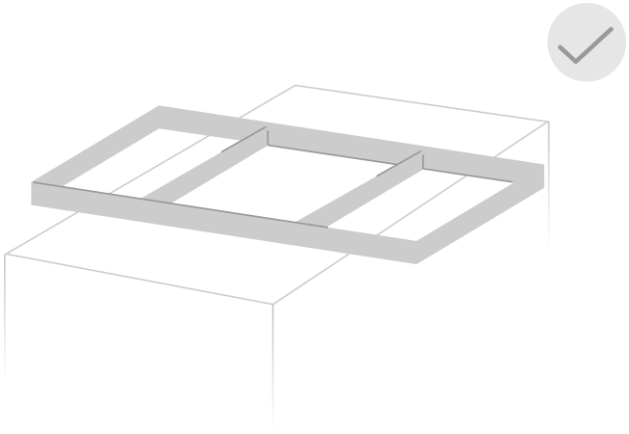


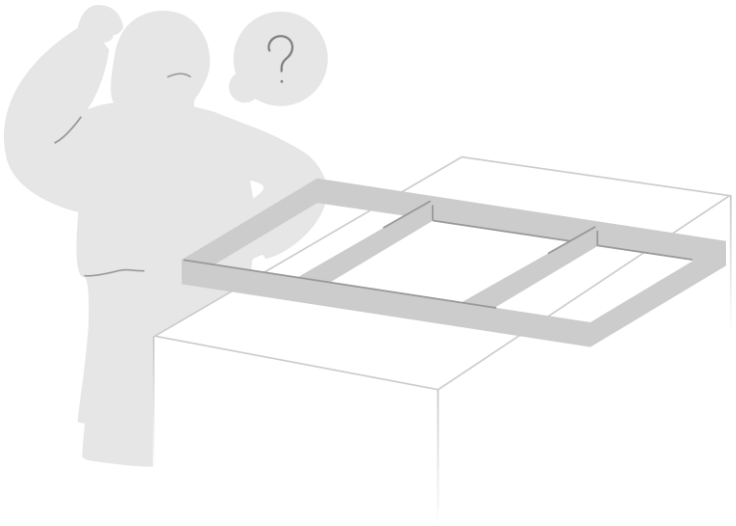

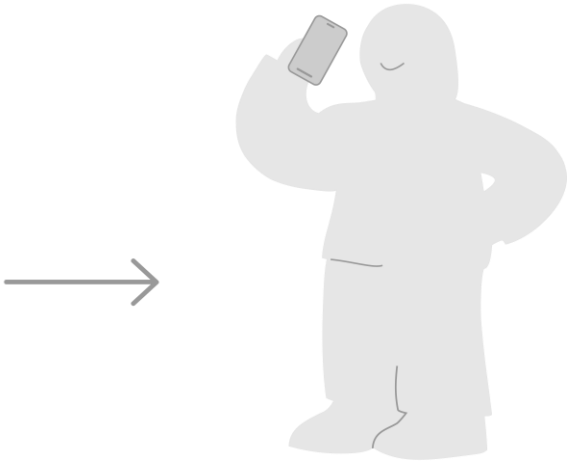

UNIVERSAL


COMPONENTS

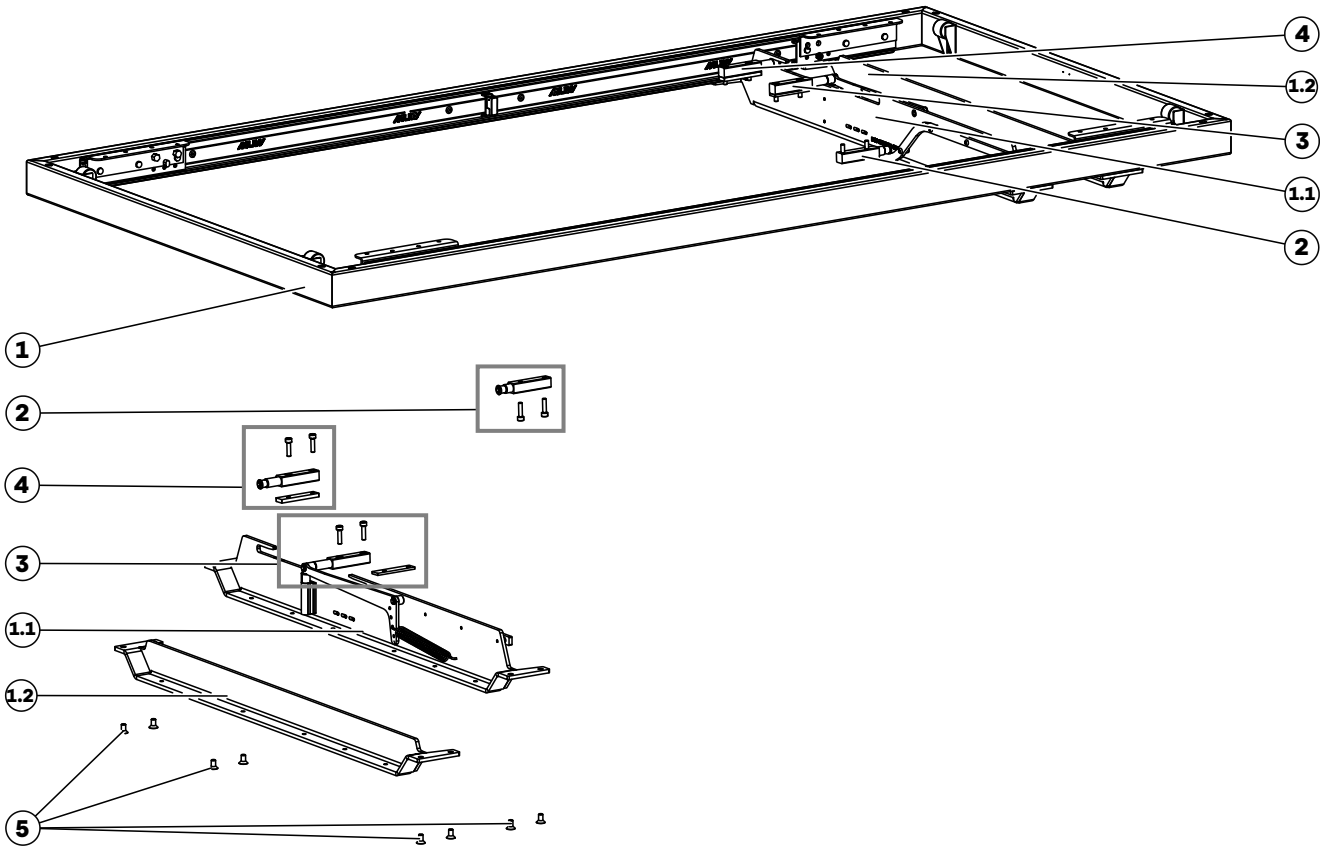


		DESCRIPTION	REFERENCE
1		Universal Frame	
	1.1	Support Crossbar for Mechanism	
	1.2	Support Crossbar for Fixing the Foot	
2		Universal Kit A DIN 912 M5x20 8.8 ZN	IN00-00001605
3		Universal Kit B DIN 912 M5x25 8.8 ZN	IN00-00001606
4		Universal Kit C DIN 912 M5x25 8.8 ZN	IN00-00001607
5		DIN 7991 M6x12 Inox	MC00-00000003

UNIVERSAL


Included

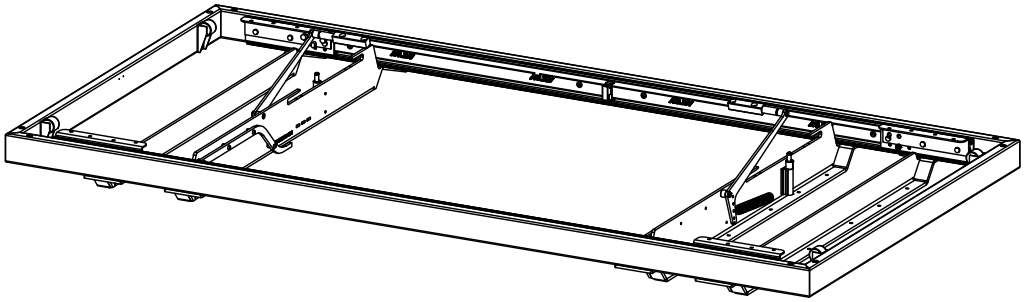


Advanced ST50

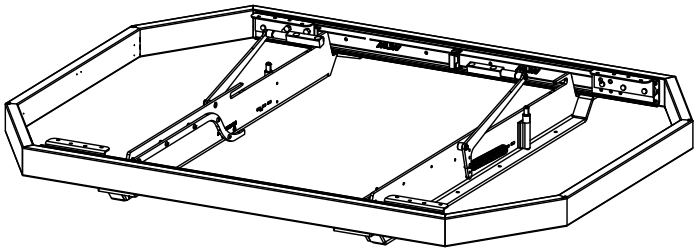


Premium ST50



Kit A - IN00-00001605 **x2**




Kit B - IN00-00001606 **x2**
Note: Thickness 3 mm

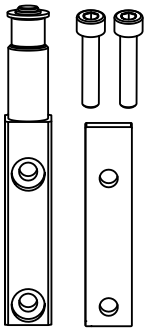


Kit C - IN00-00001607 **x2**
Note: Thickness 5mm

UNIVERSAL


Not Included | Available at MUVV **Kit IN00-00001738-00**

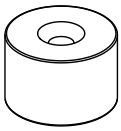


MC00-00003447
Positive
x4

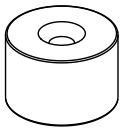


MC00-00003759
Negative
x4




MC00-00004631 **x8**

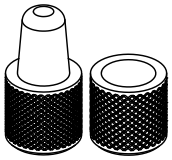


MC00-00003783 **x8**




MC00-000004534 **x4**

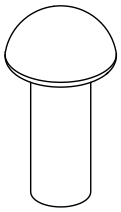


MC00-00004535 **x4**



MC00-00001028 **x12**



MC00-00002279 **x28**




MC00-00000106 **x16**




MC00-00003449 **x2**



MC00-00000415 **x12**



MC00-00003450 **x2**




MC00-00000088 **x4**




MC00-00003818
x1

UNIVERSAL


Not Included

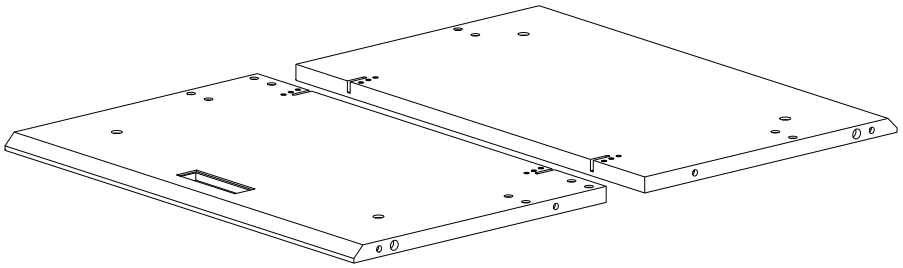


Wooden Extension Leaves **x1**
Advanced ST50

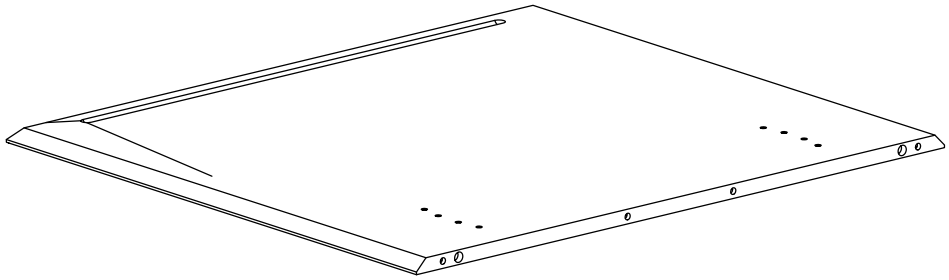

Wooden Tabletop **x2**
Advanced ST50

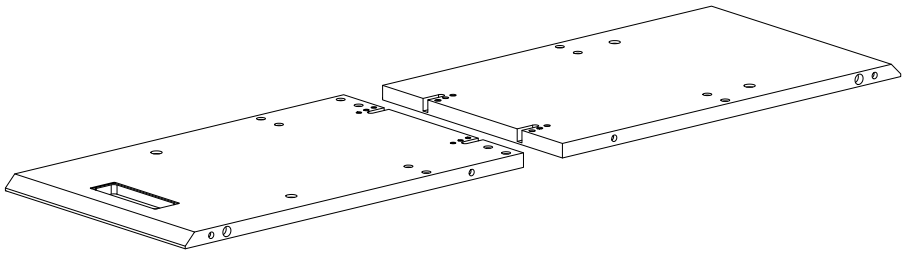

Wooden Extension Leaves **x1**
Premium ST50

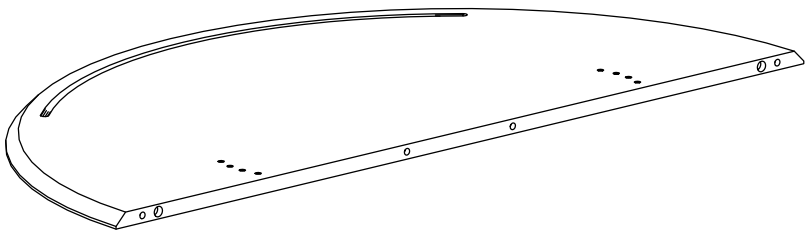


Wooden Tabletop **x2**
Premium ST50

UNIVERSAL

Tools




Glue

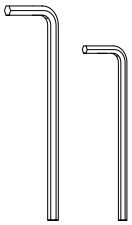


Allen Key
3 | 4 | 5 mm



Screwdriver



Mallet

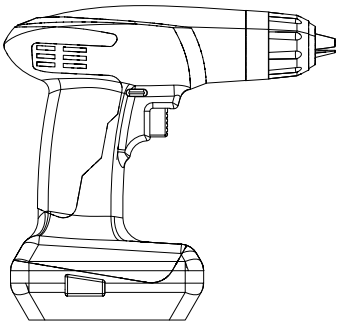

Drill Driver

Adhesive Recommendation

Screw		Handle	
Composition	Anaerobic Methacrylate Resin	**Composition**	SMX Hybrid Polymer
Highly resistant to heat, corrosion, vibrations, water, gas, oils, hydrocarbons and many chemicals. Proven unscrewing resistance at +200°C.		Excellent adhesion on almost all surfaces, even slightly damp ones. Very good mechanical properties. Good resistance to heat, corrosion, salt water, hydrocarbons and other chemical products.	
Example	LOXEAL ENGEINEERING ADHESIVES *LOXEAL 55-03*	**Example**	SOUDAL *T-REX MS Crystal*

UNIVERSAL


There may be components left over


The KIT supplied contains the maximum number of components that a compatible frame can accommodate. Depending on the dimensions of the frame purchased and the number of extension leaves it can support, some components may be left over.


STEP	REFERENCE	DESCRIPTION	QTY
1.	MC00-00000003	DIN 7991 M6x12 Inox	8 | 16
2.	MC00-00003818	Aluminium Flush Handle 143x45x16mm Matt Black	1
	MC00-00001028	Compass Nut for Wood M5x12	12
	MC00-00002279	Compass Nut for Wood M4x8	12
	MC00-00004534	Compass Nut for Wood M8x15	4
	MC00-00004535	Nylon Wood Leveller M8x20	4
	MC00-00004631	DIN 7982 CZ M3x30 Zn	4
	MC00-00003447	Iman Diameter 15mm Thickness 10mm (Positive)	2
	MC00-00003759	Iman Diameter 15mm Thickness 10mm (Negative)	2
	MC00-00003783	Knurled Dowel/Knob Set	4
	MC00-00000415	DIN 965 M4x12 4.8 ZN	12
	MC00-00003449	Hinge up to 25mm Leaves Thickness	2
	IN00-00001605	Universal Kit A	2
3.	MC00-00002279	Compass Nut for Wood M4x8	16
	MC00-00004631	DIN 7982 CZ M3x30 Zn	4
	MC00-00003447	Iman Diameter 15mm Thickness 10mm (Positive)	2
	MC00-00003759	Iman Diameter 15mm Thickness 10mm (Negative)	2
	MC00-00003783	Knurled Dowel/Knob Set	4
5.	MC00-00000106	ISO 7380 M4x12 8.8 ZN	16
8.	IN00-00001606	Universal Kit B	2
9.	IN00-00001607	Universal Kit C	2

UNIVERSAL

TECHNICAL INFORMATION

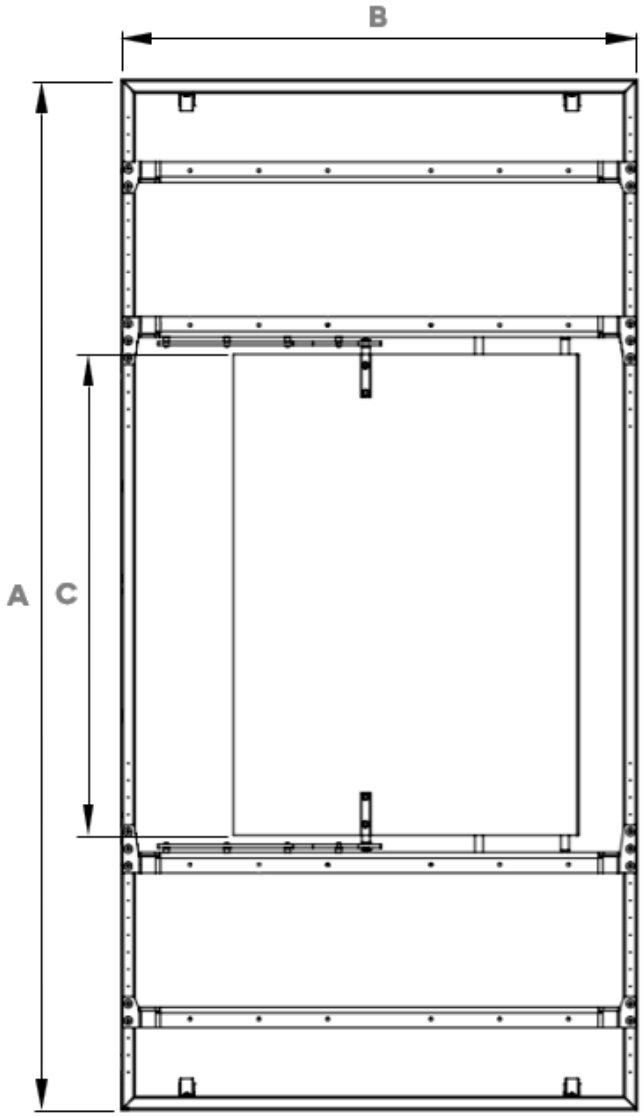

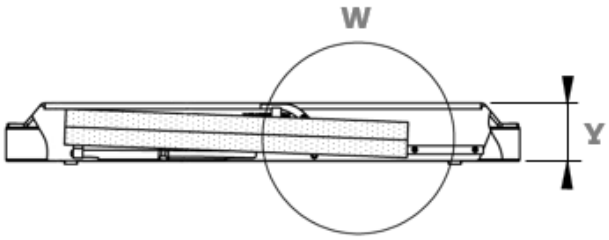

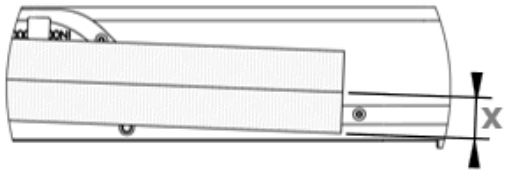


DETAIL W

Frame length – **A**
Frame width – **B**
Max. leaf length – **C**
Leaf thickness – **X**
Frame height – **Y**

ADVANCED ST50	A	B	C	X	Y	Nº CROSSBAR Nº TRAVERSE
IN00-00000334	1500mm	750mm	500-900mm	19-25mm	50mm	2
IN00-00000335	1500mm	750mm	500-900mm	19-25mm	50mm	4
IN00-00000336	1750mm	750mm	500-900mm	19-25mm	50mm	2
IN00-00000337	1750mm	750mm	500-900mm	19-25mm	50mm	4

Maximum overall product weight: 23kg
Maximum load: 120kg
Maximum weight allowed for the extension leaves: 9kg

UNIVERSAL

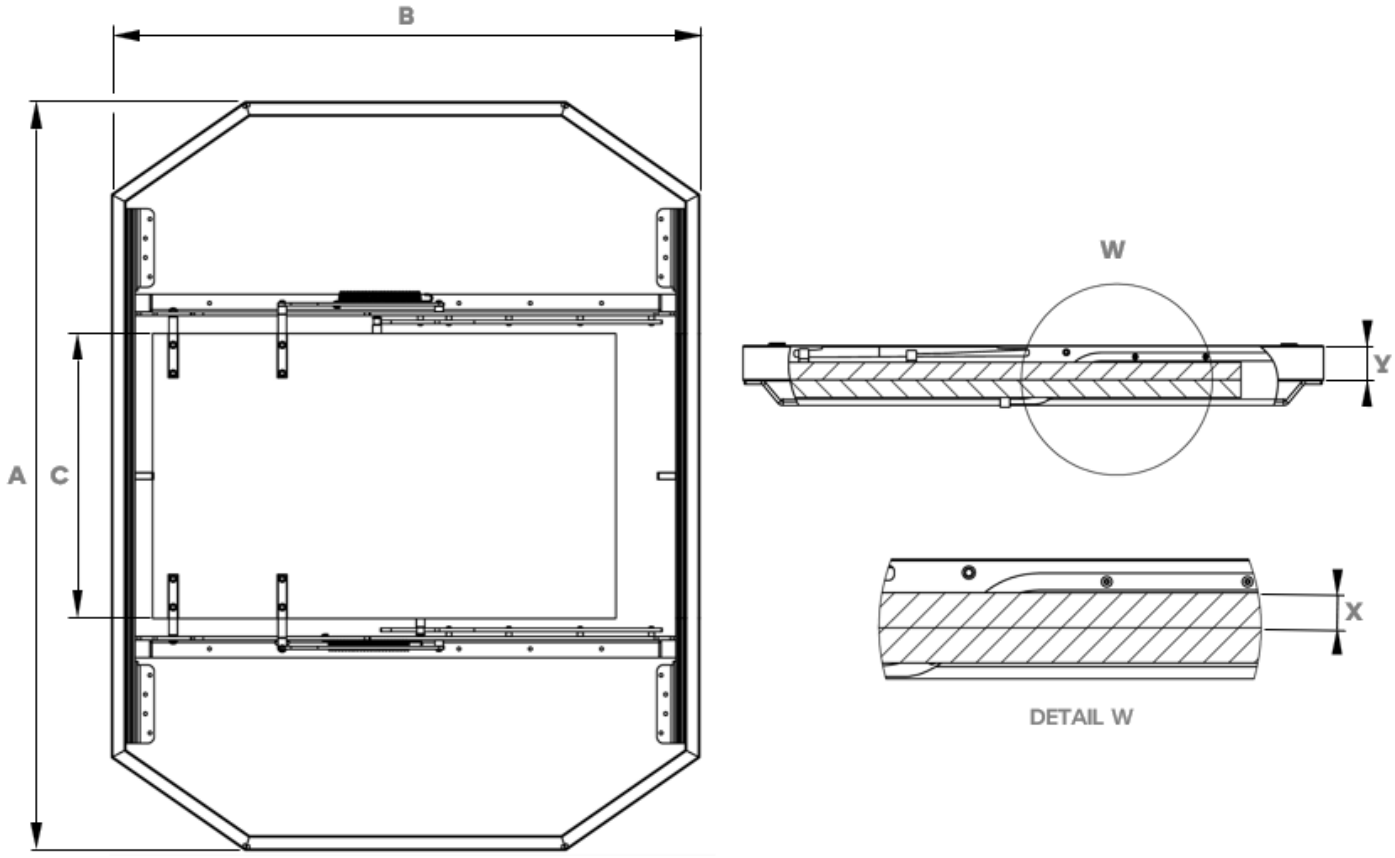

Frame length – **A**
Frame width – **B**
Max. leaf length – **C**
Leaf thickness – **X**
Frame height – **Y**


PREMIUM ST50	A	B	C	X	Y	Nº CROSSBAR Nº TRAVERSE
IN00-00001334	1050mm	825mm	400mm	19-25mm	50mm	2

Maximum overall product weight: 16kg
Maximum load: 120kg
Maximum weight allowed for the extension leaves: 9kg


UNIVERSAL

PRE-START

The crossbars that support the mechanism come adjusted for 800 mm leaves (standard position). Measure the extension leaves you will use to confirm their length (**x**). Use the image and table below to adjust the crossbars to the length of your extension leaves (**step 1.**). The support crossbars for fixing the foot must be adjusted according to the dimensions of the foot.

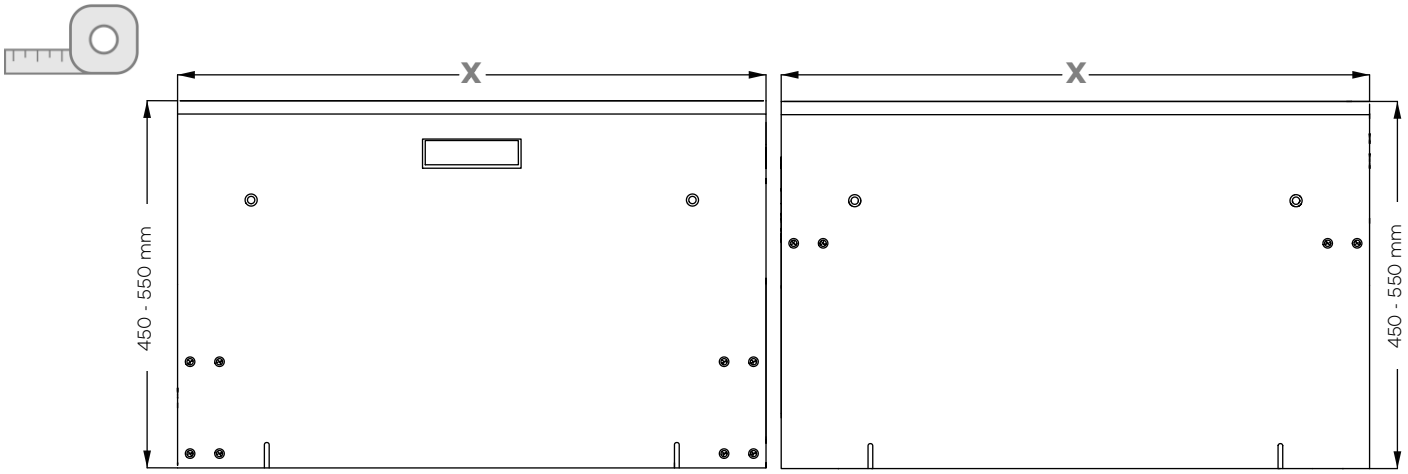


Max. Leaf Length	500 mm	600 mm	700 mm	800 mm	900 mm
Position	1 | 2	2 | 3	3 | 4	4 | 5	5 | 6

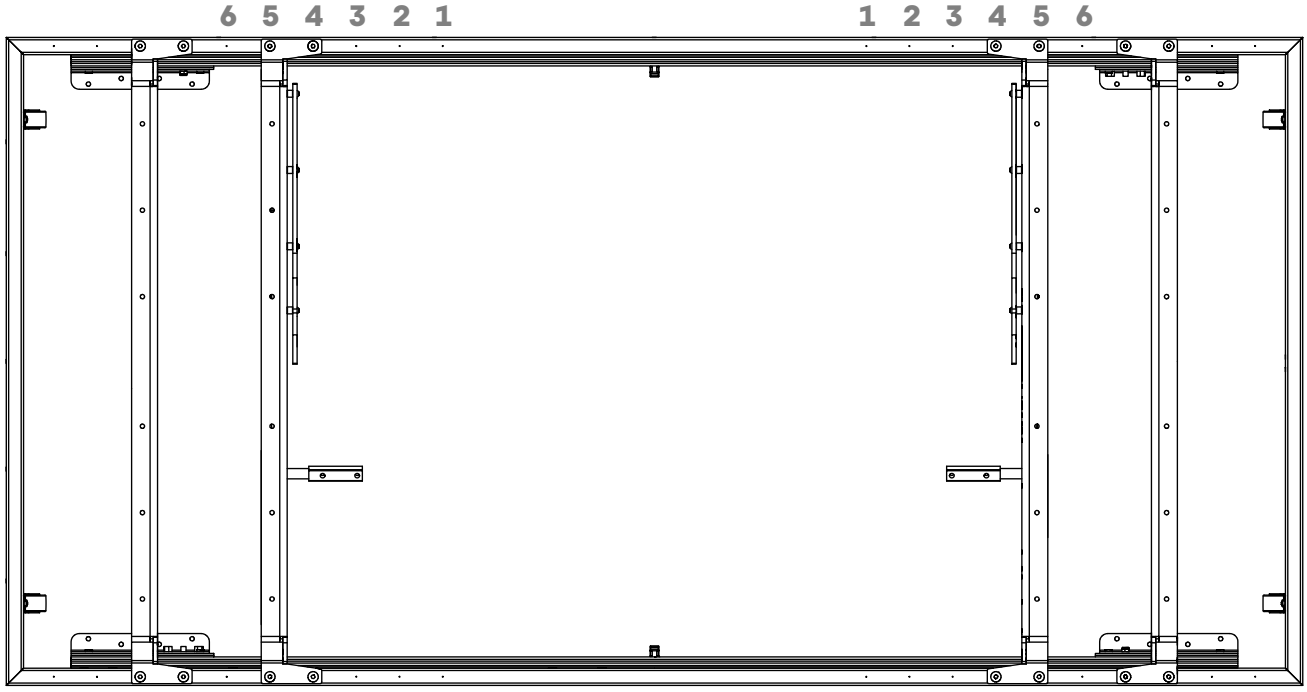



UNIVERSAL


1.

Move the crossbars to the holes corresponding to the size of your extension leaves.

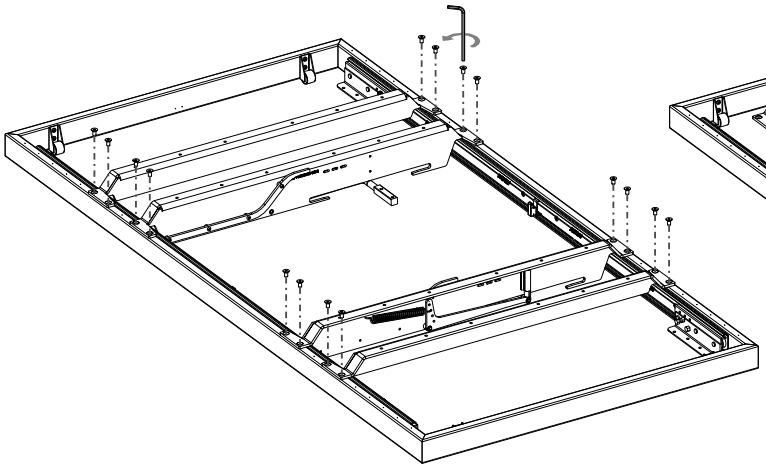

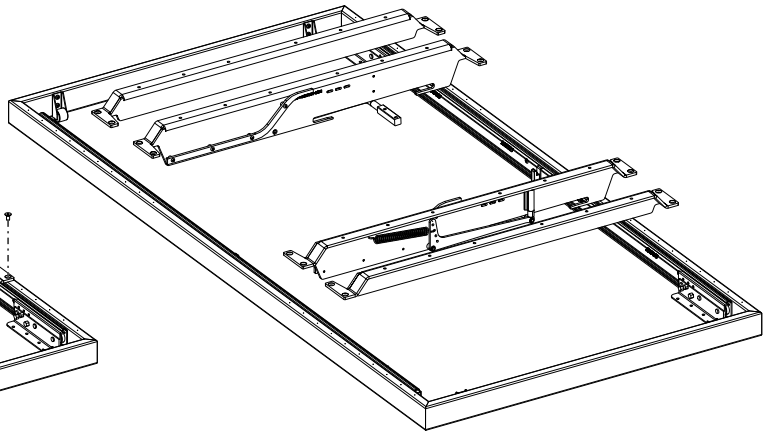


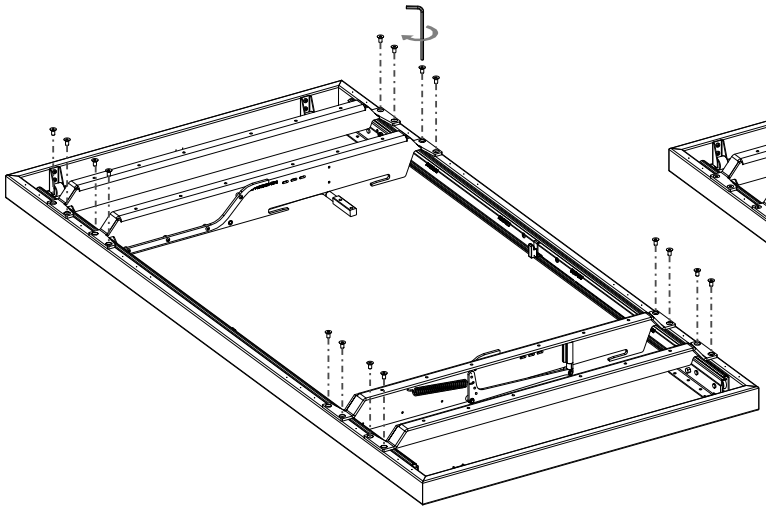

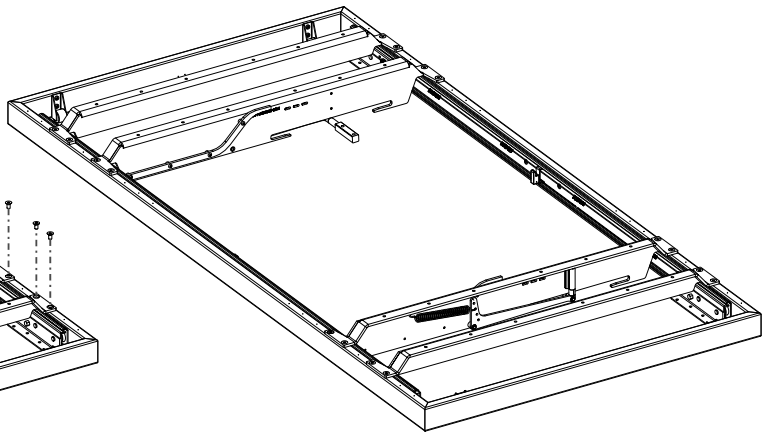

UNIVERSAL


2.



1

MC00-00001028


x8



2

MC00-00002279


x6




3

MC00-00004534

x2

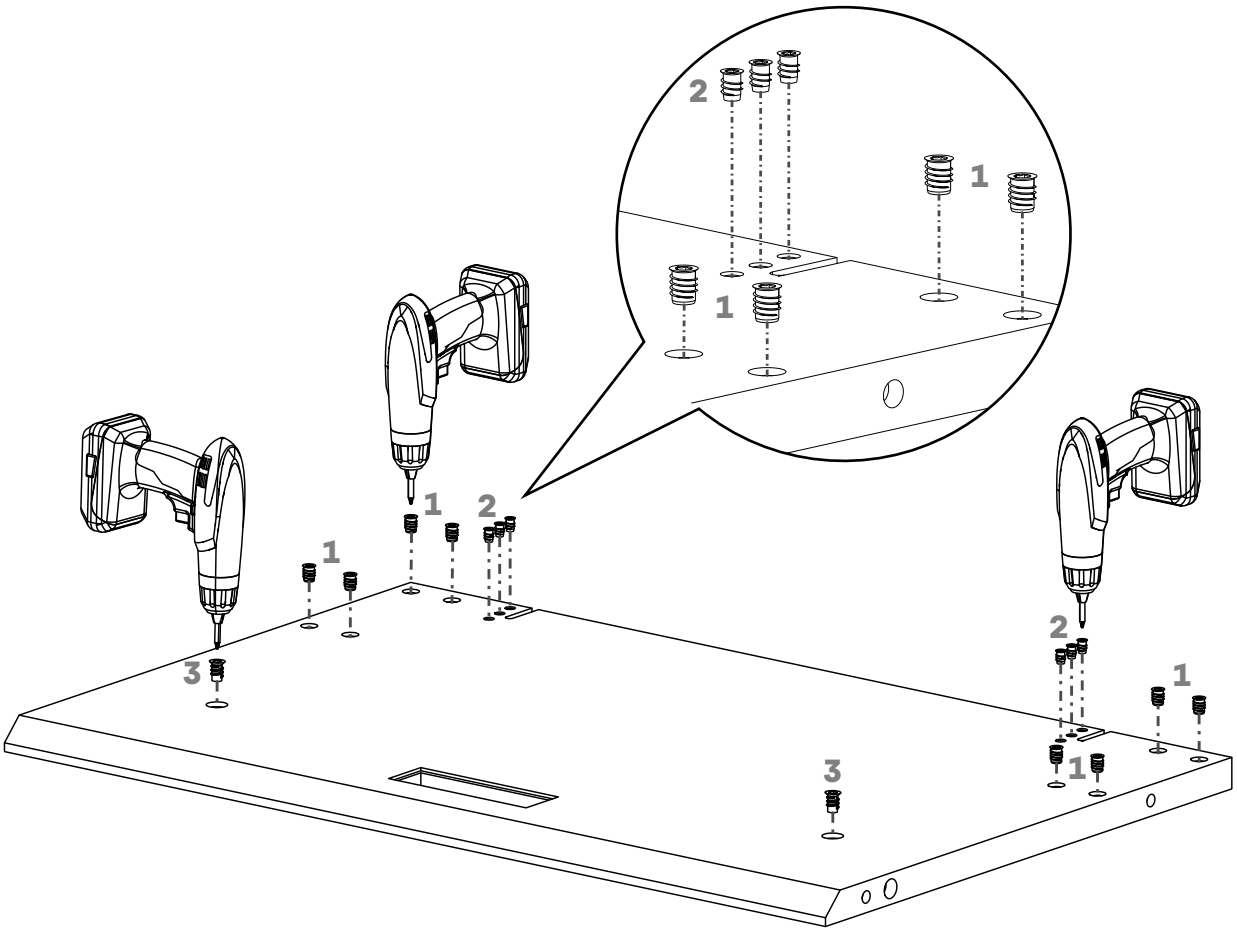


2.1

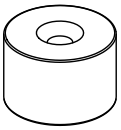

4

MC00-00003447


x1 **(+)**

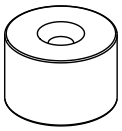

5

MC00-00003759


x1 **(-)**



6

MC00-00004631


x2

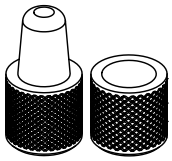


7

MC00-00003783

x2

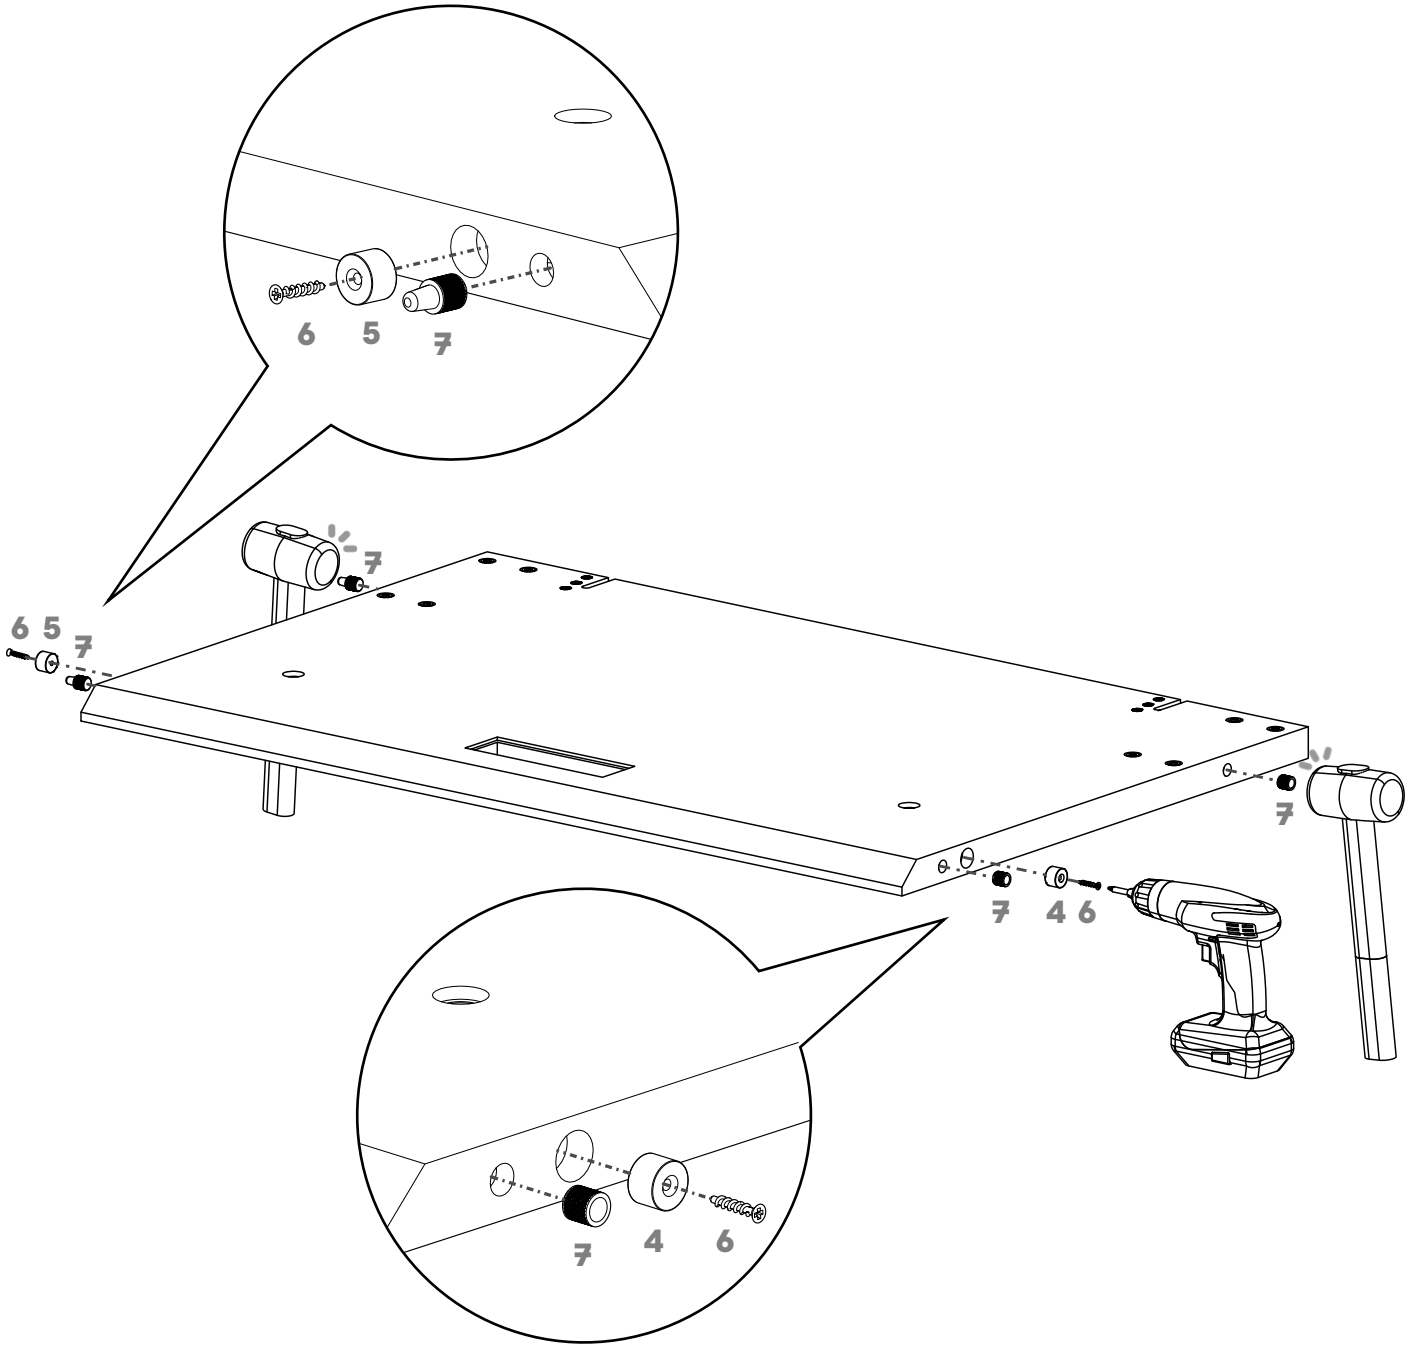


2.2



1

MC00-00001028


x4



2

MC00-00002279


x6




3

MC00-00004534

x2

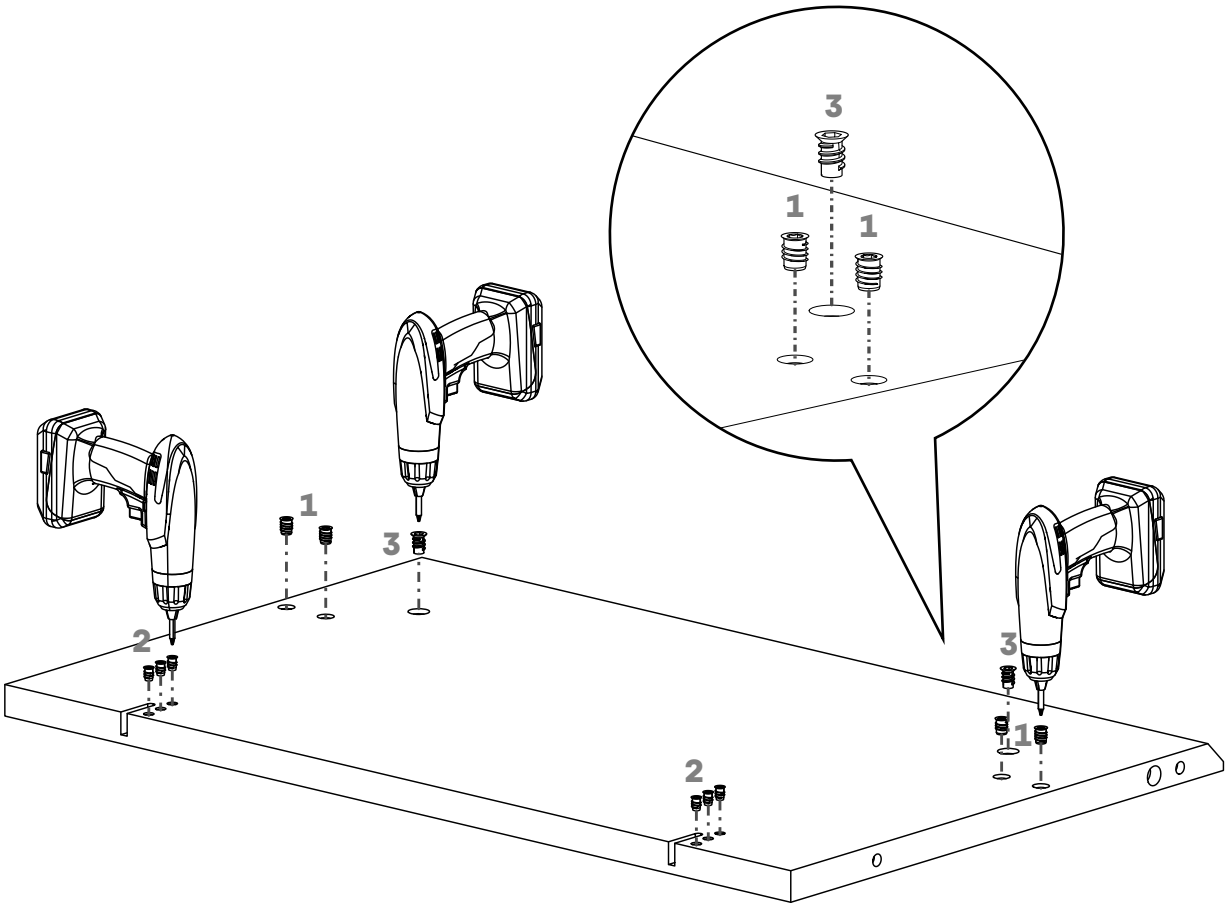


2.3

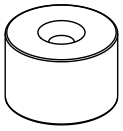

4

MC00-00003447


x1 **(+)**

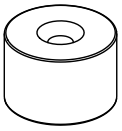

5

MC00-00003759


x1 **(-)**



6

MC00-00004631


x2

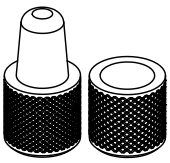


7

MC00-00003783

x2

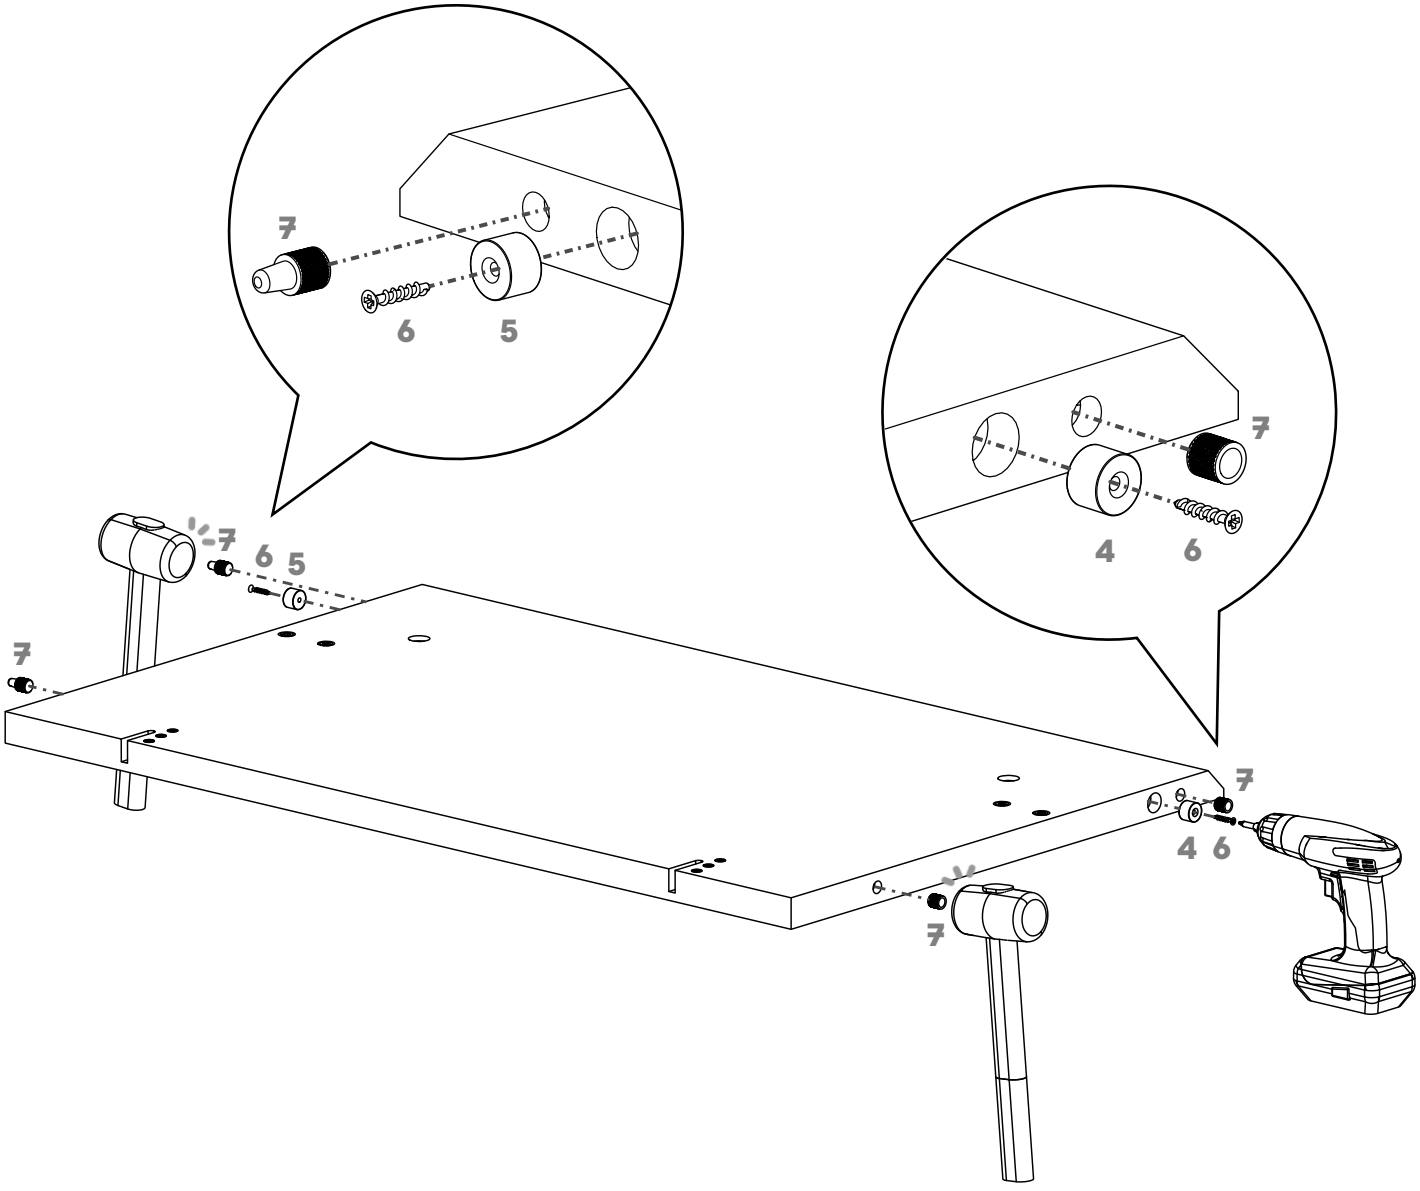


2.4



A

Kit A - IN00-00001605

x2



8

MC00-00004535

x4



9

MC00-00000415

x12



9

MC00-00003449


x2



10


MC00-00003818

x1

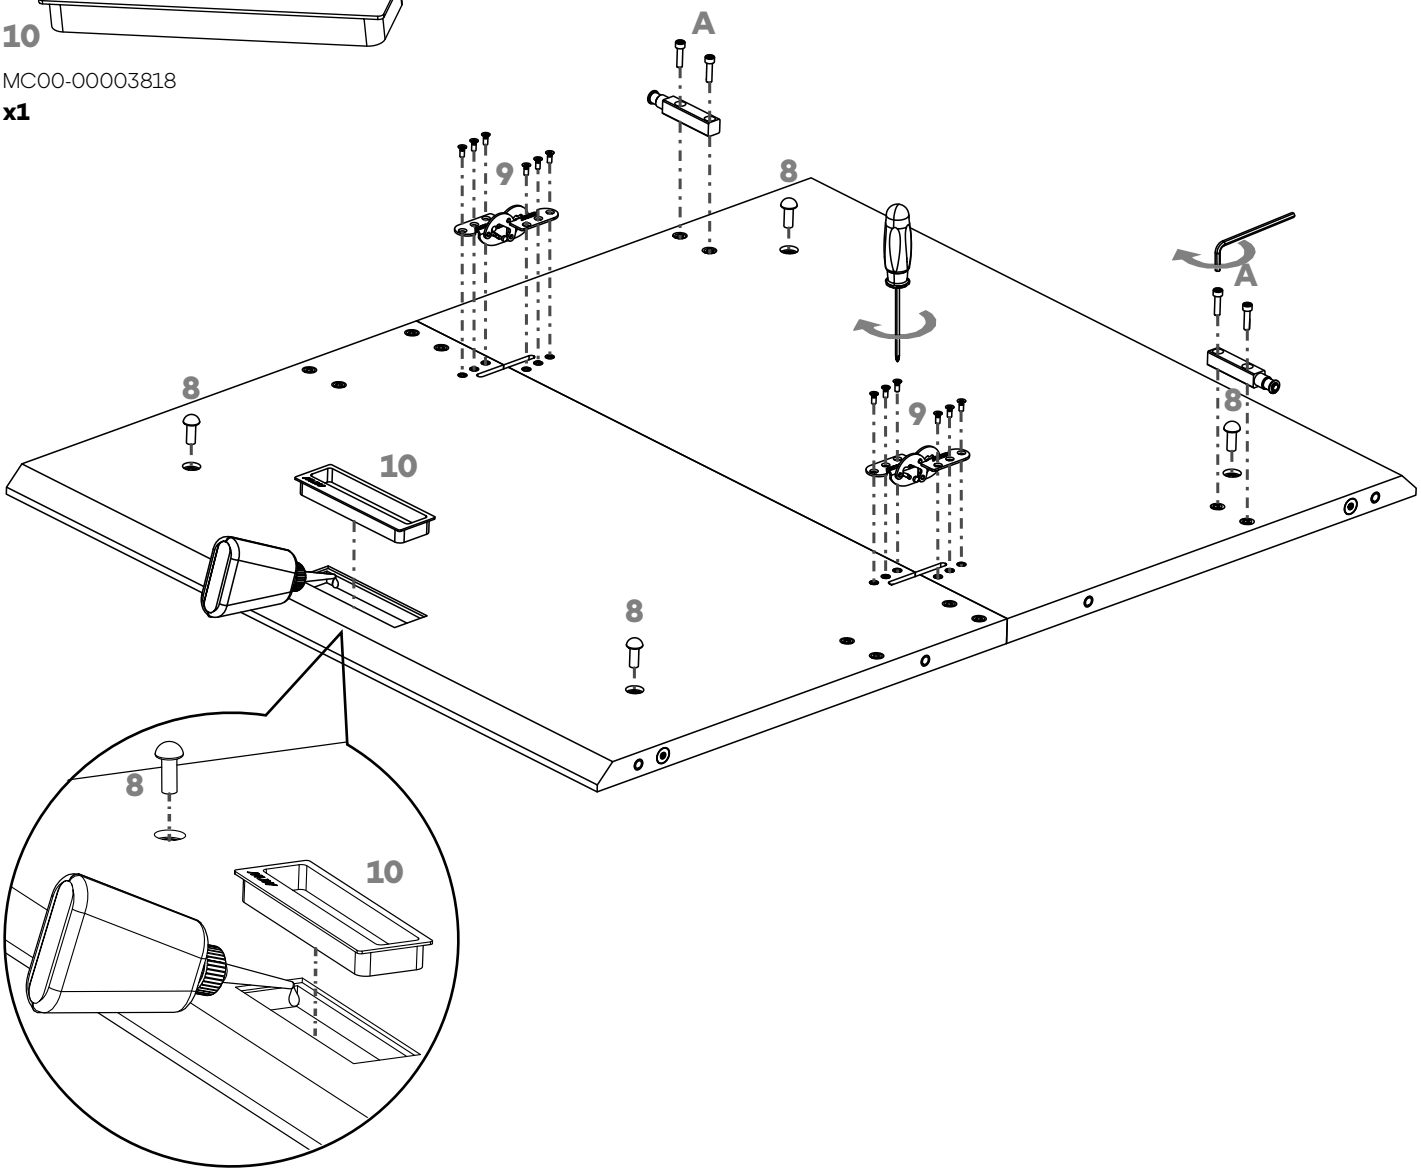

UNIVERSAL


3.



2

MC00-00002279


x8

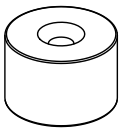

4

MC00-00003447

x2 **(+)**



6

MC00-00004631


x2




7

MC00-00003783


x4

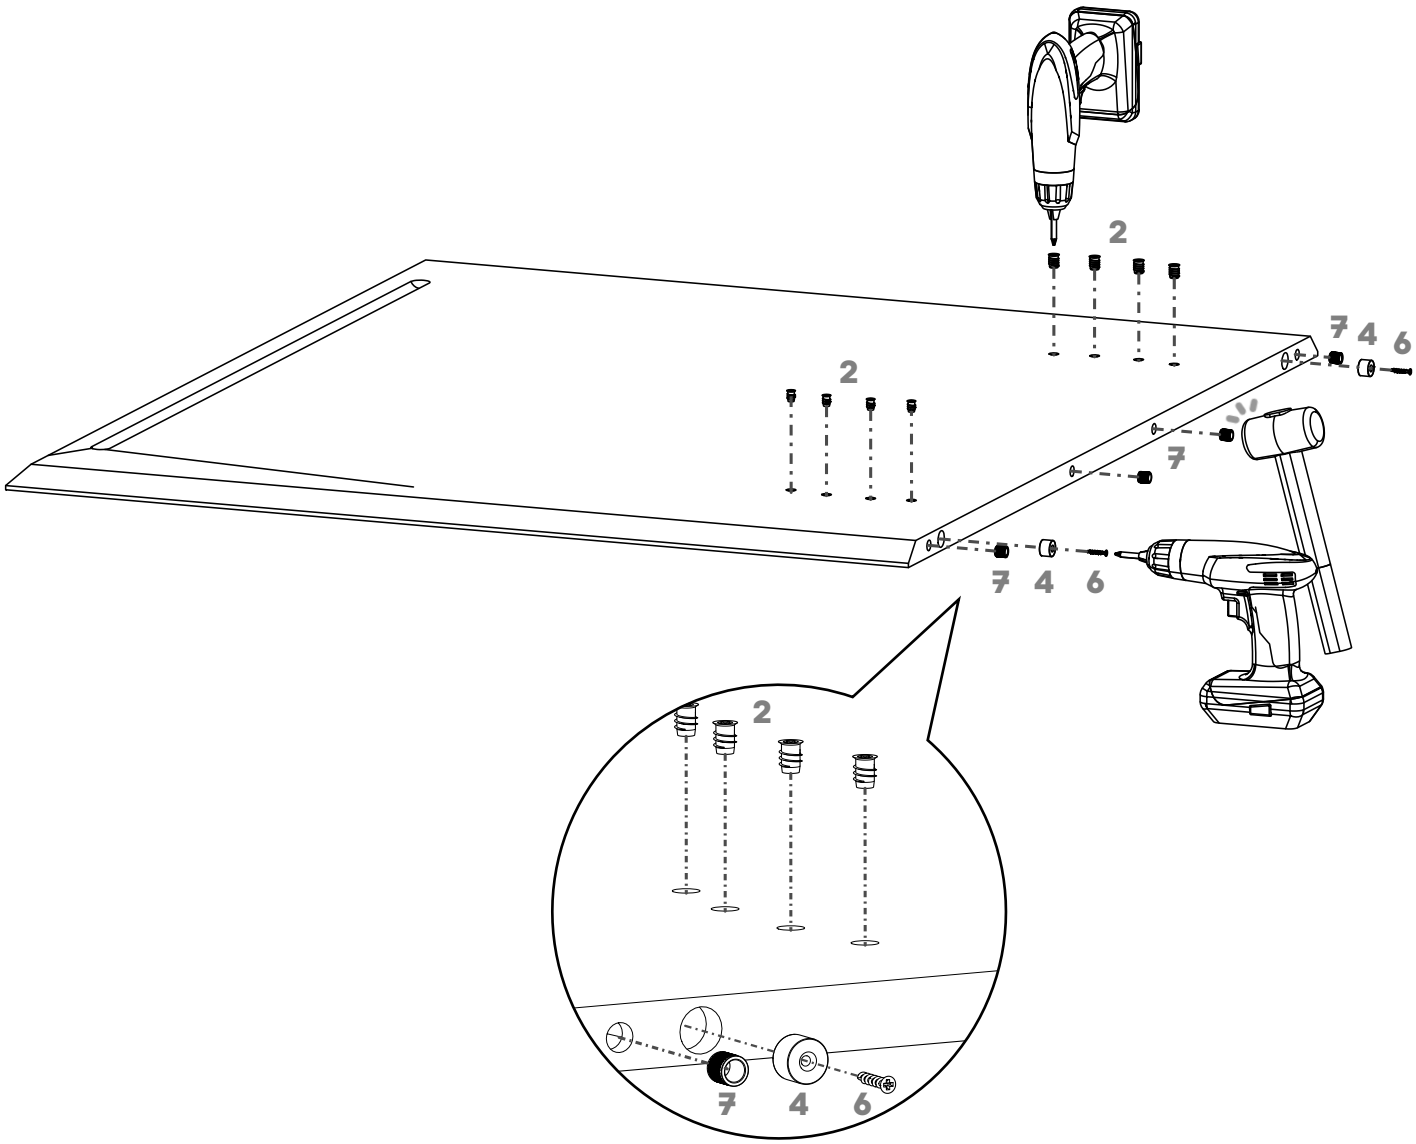


3.1




2
MC00-00002279
x8

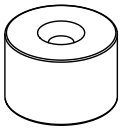


5
MC00-00003759
x2 **(-)**



6
MC00-00004631
x2



7
MC00-00003783
x4

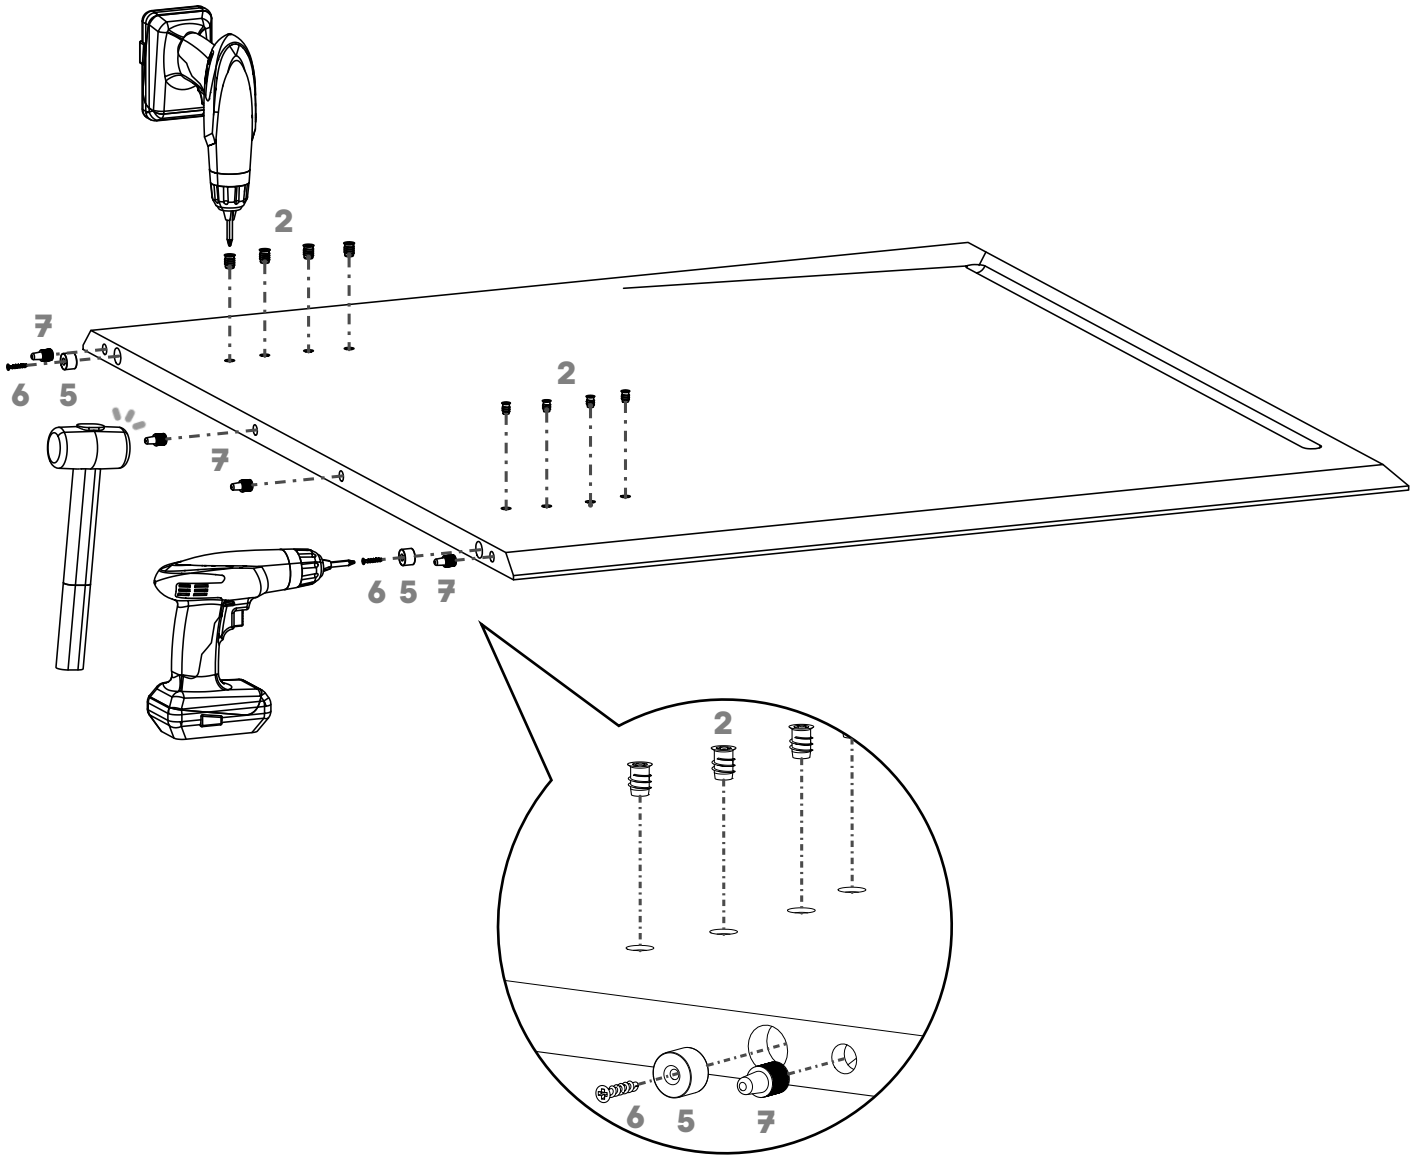


4.

Before proceeding with the next steps, the table foot **must be assembled** and the frame properly fixed to it. To do this, use the instruction manual for the table foot you bought from MUVV or the one you are going to use. If you don't have a table foot, you can proceed by mounting it on a **non-rough surface**.






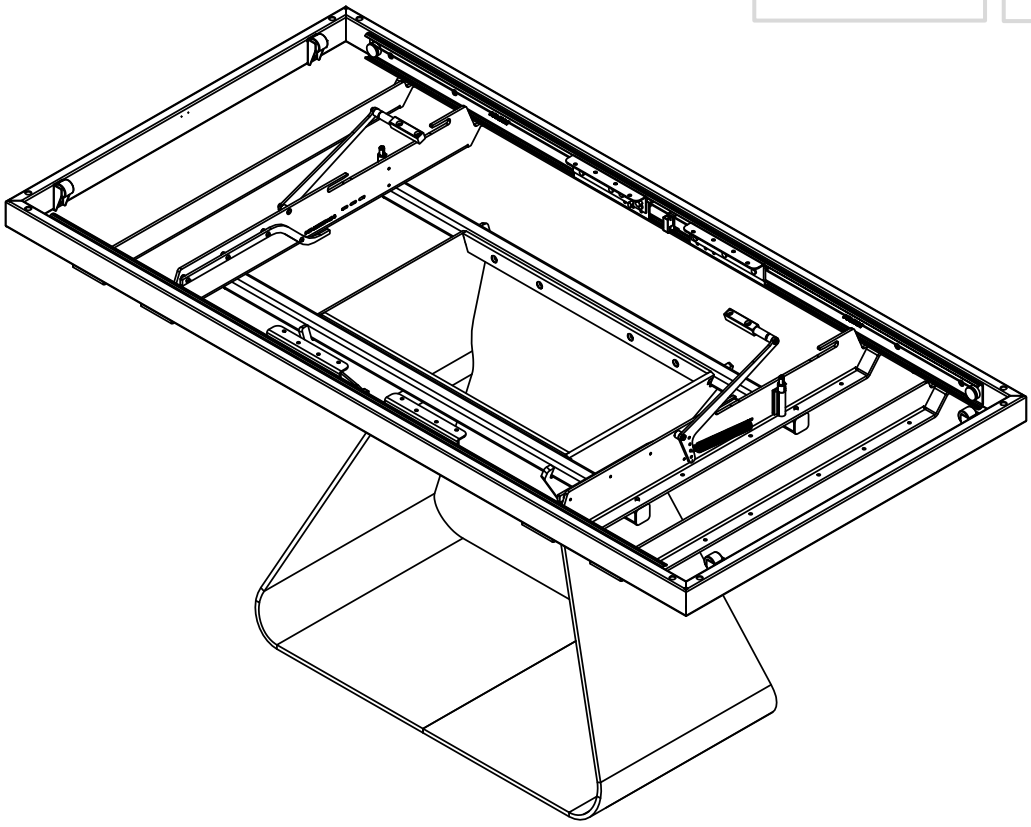


5.


Use the brake on each side to adjust the slide's opening stroke.

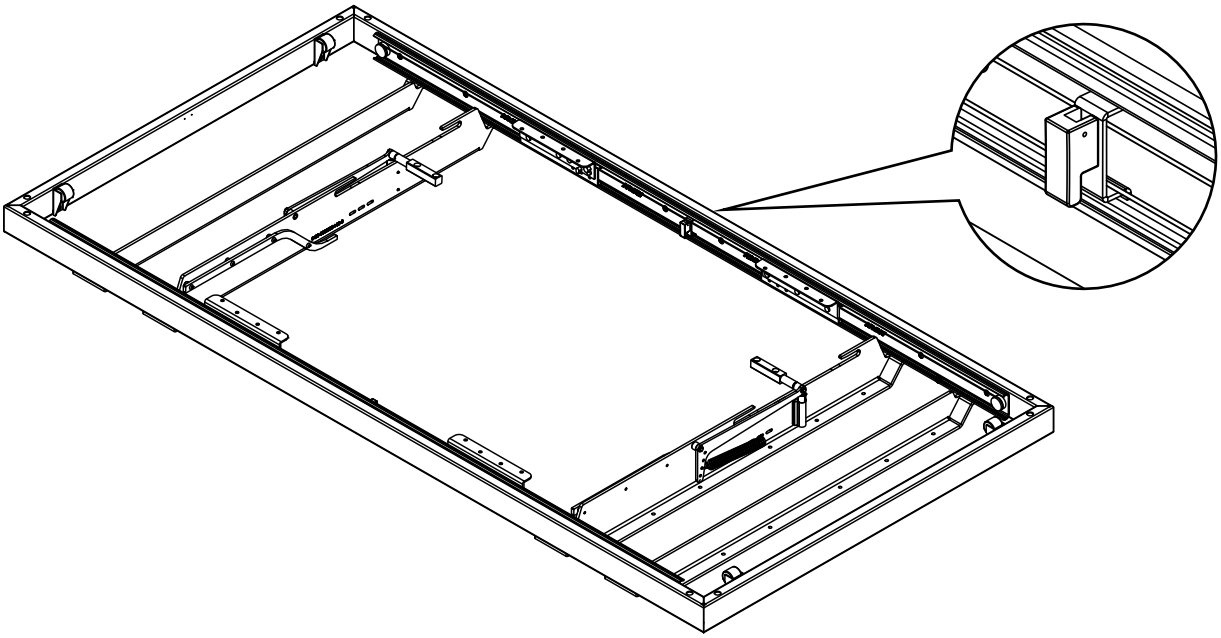


Make sure that the knurled pins on the tabletops match the knurled pins on the extension leaves.

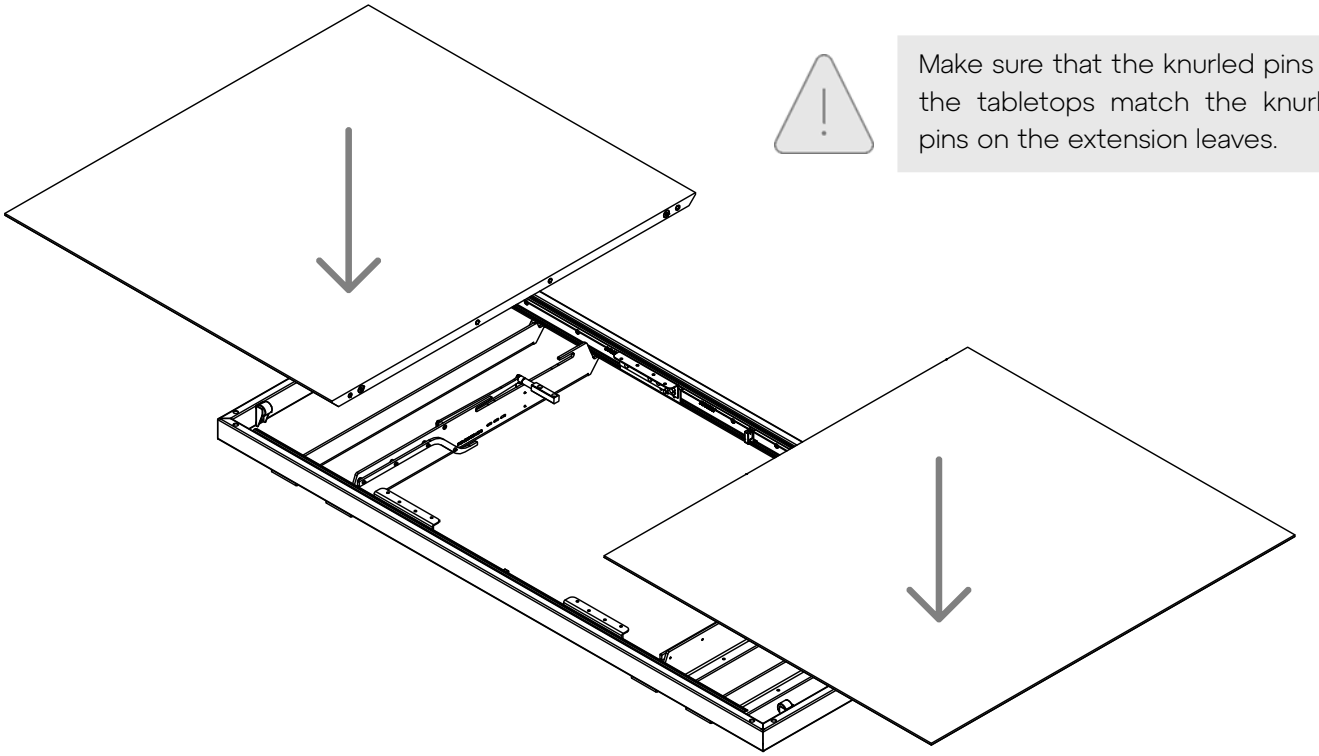


5.1



MC00-00000106
x16

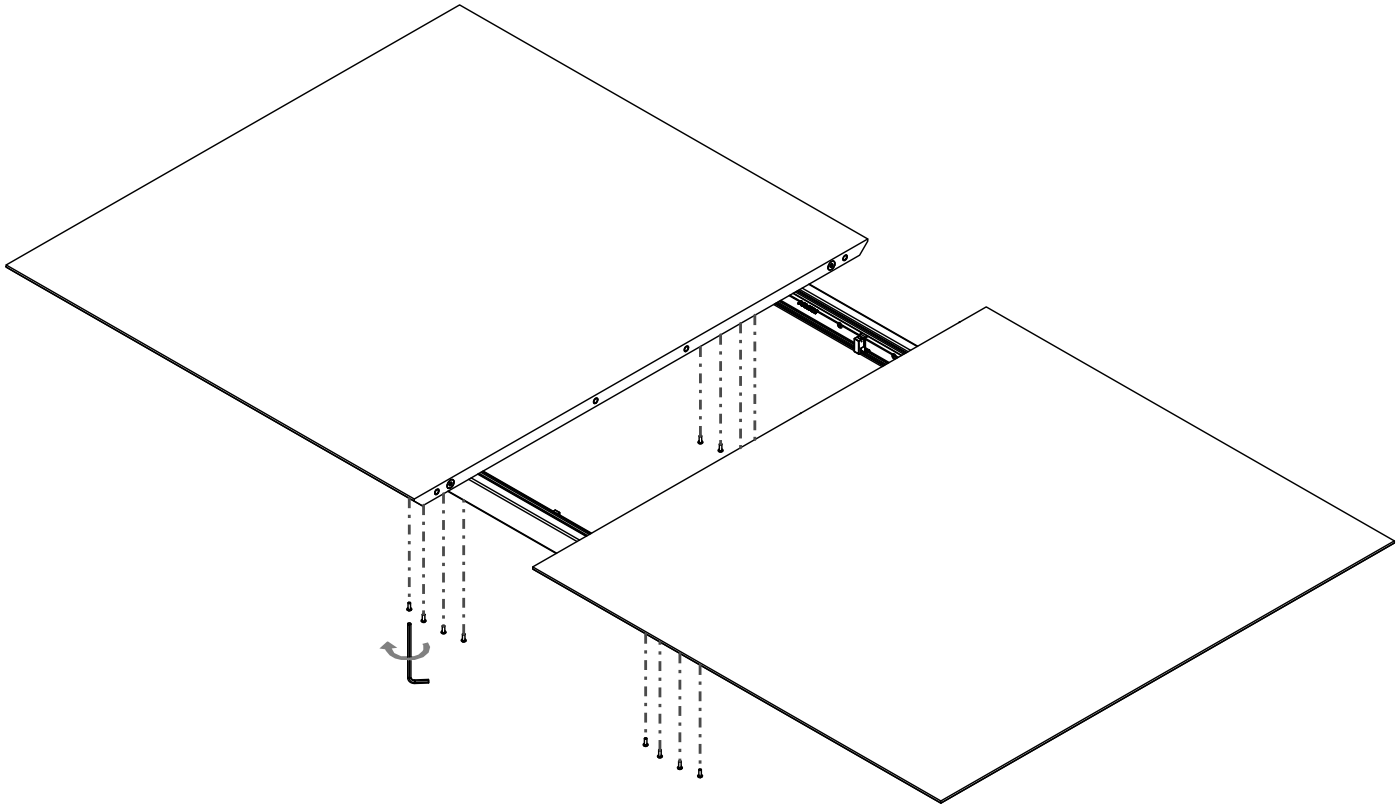

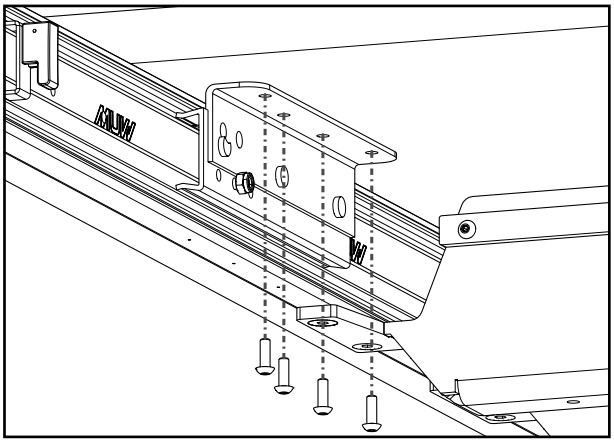


Do **NOT** turn the frame over.


Assemble from the bottom.

6.


MOVEMENT TEST

Open and close the tabletops to be sure there are no movement problems. Guarantee that the tabletops are aligned/level.

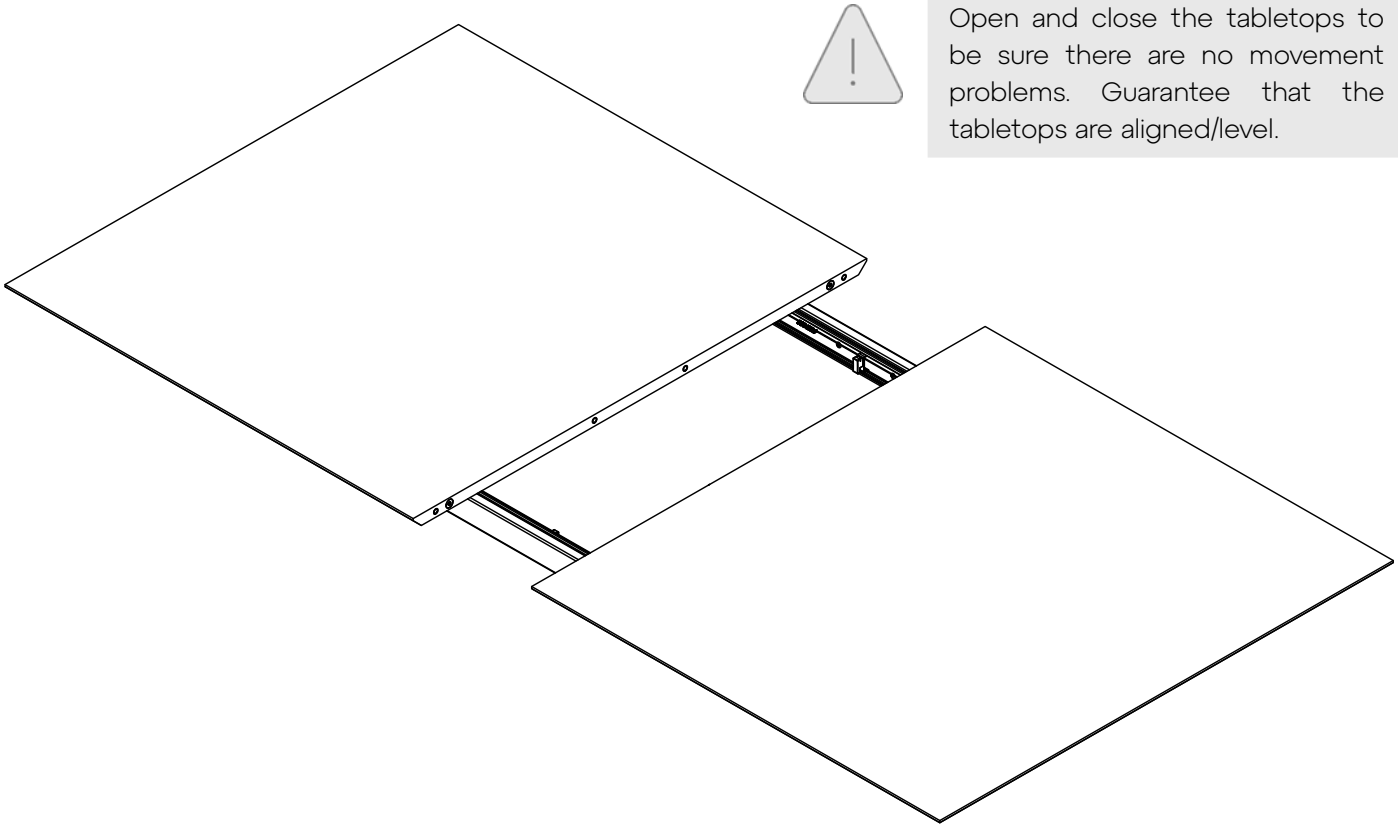


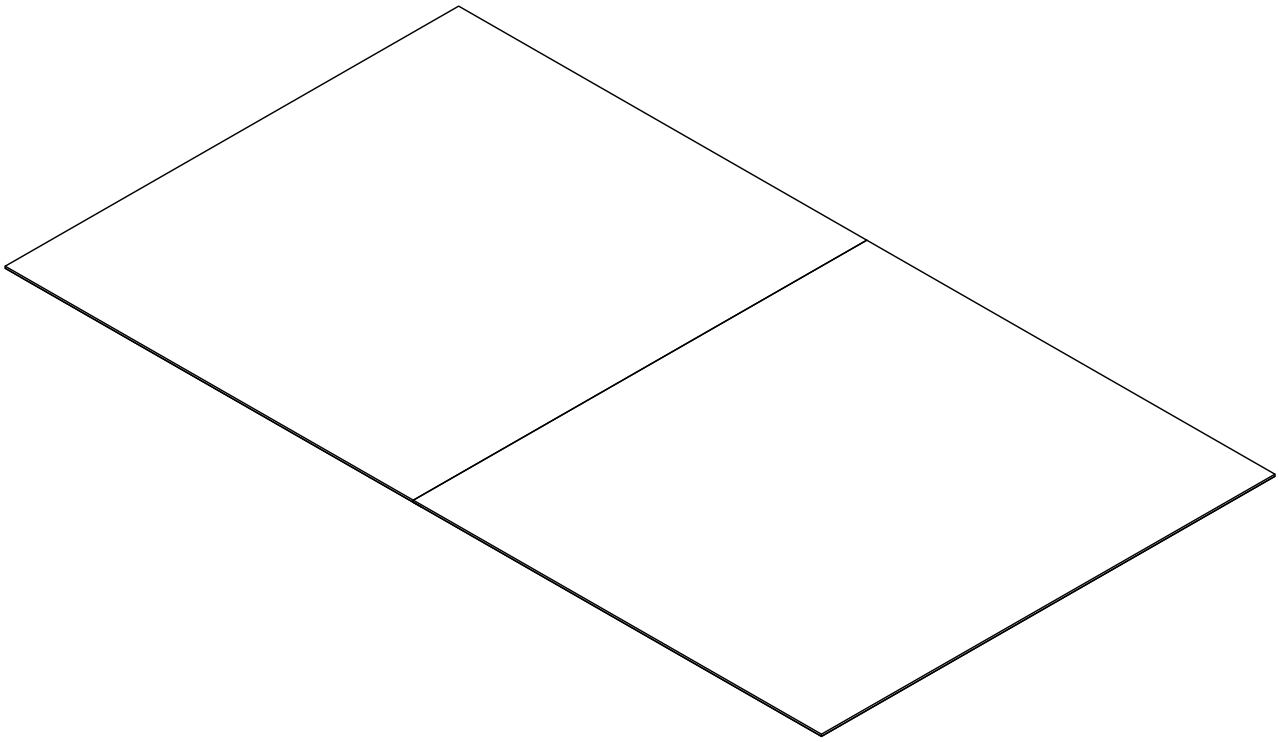

7.

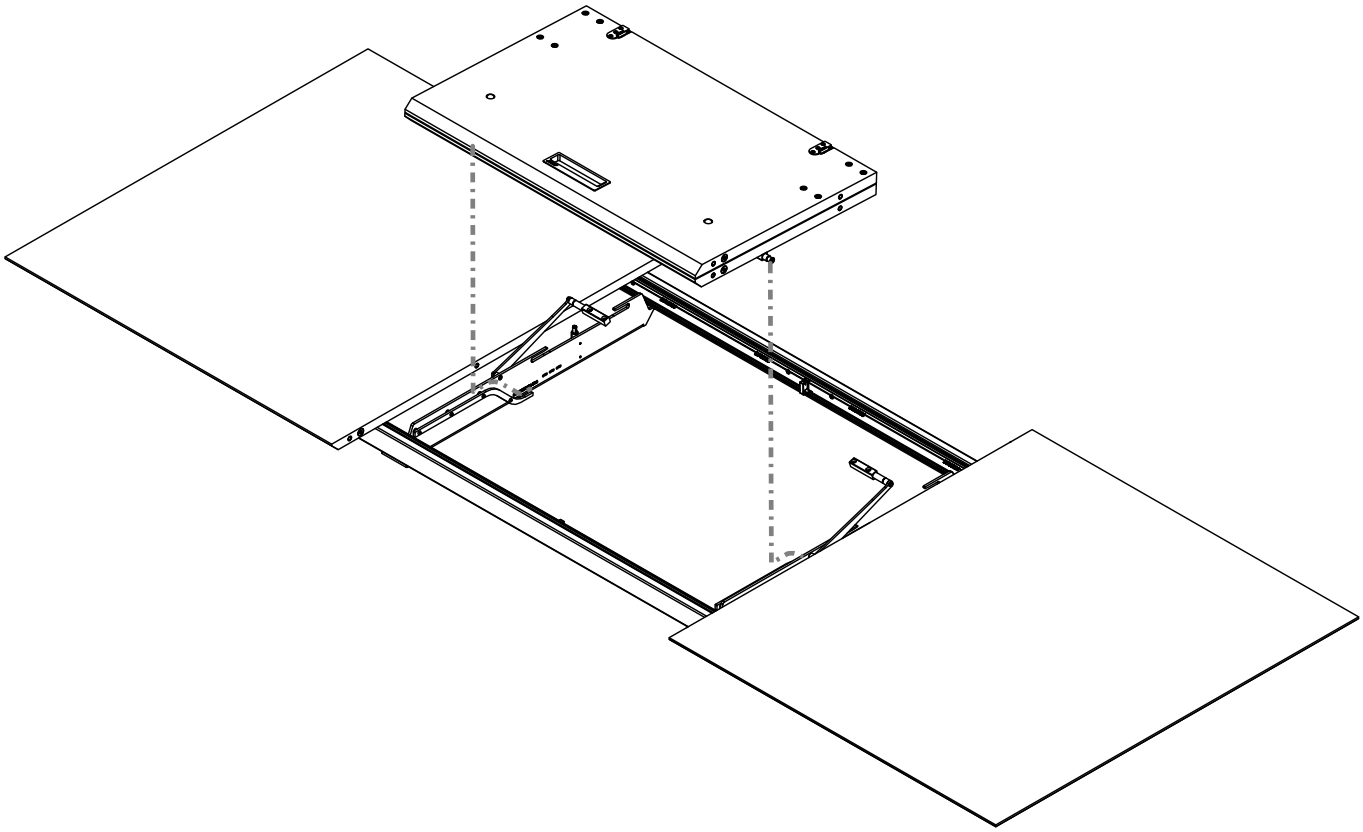


8.




B

Kit B - IN00-00001606

x2

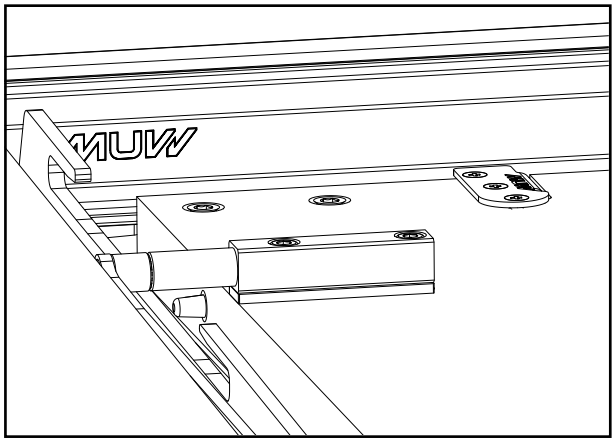


9.

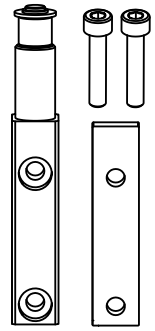



C


Kit C - IN00-00001607

x2

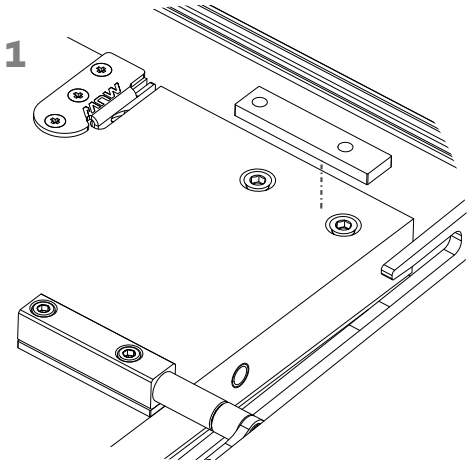


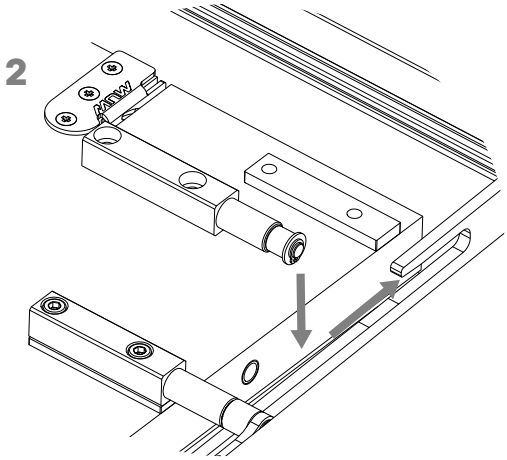

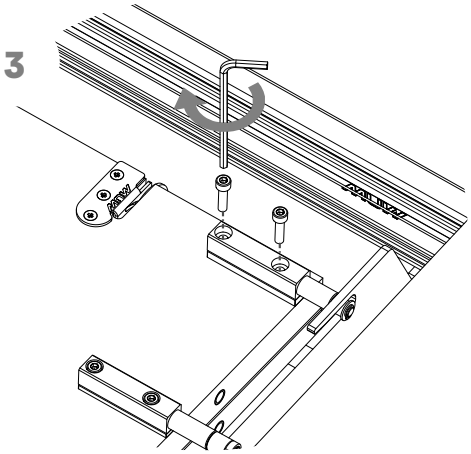


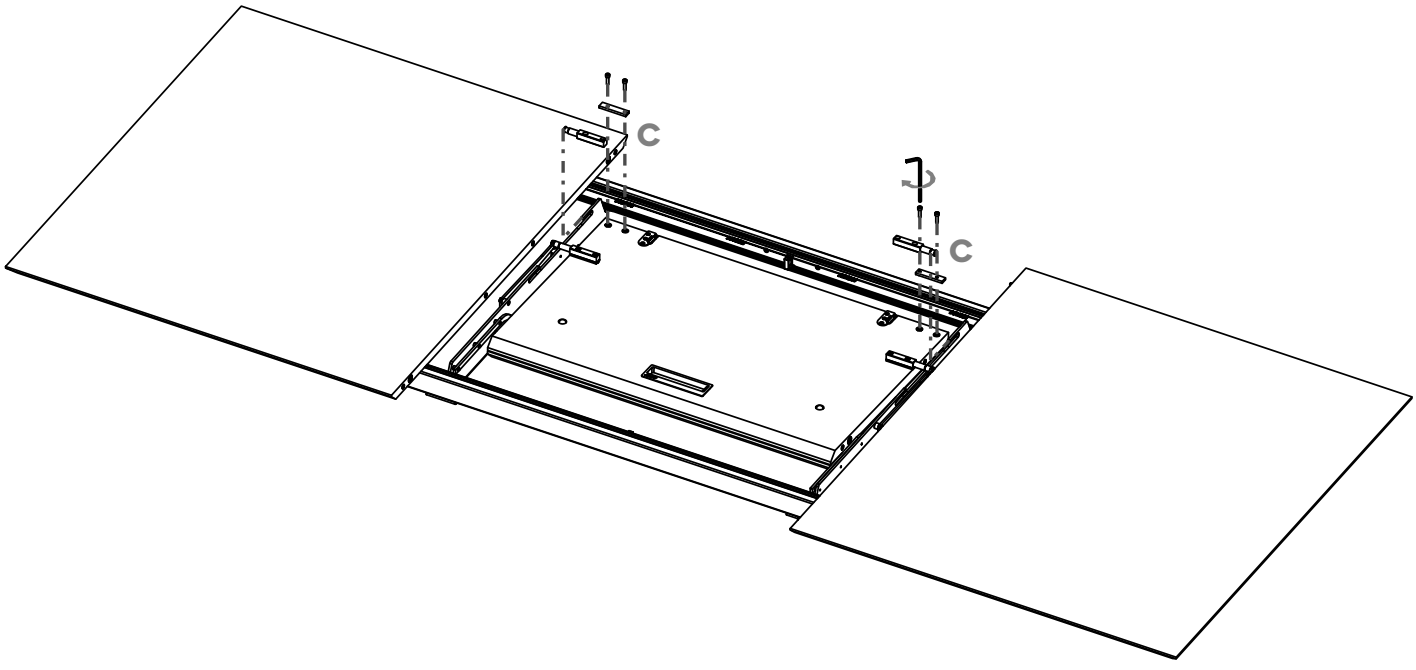

10.

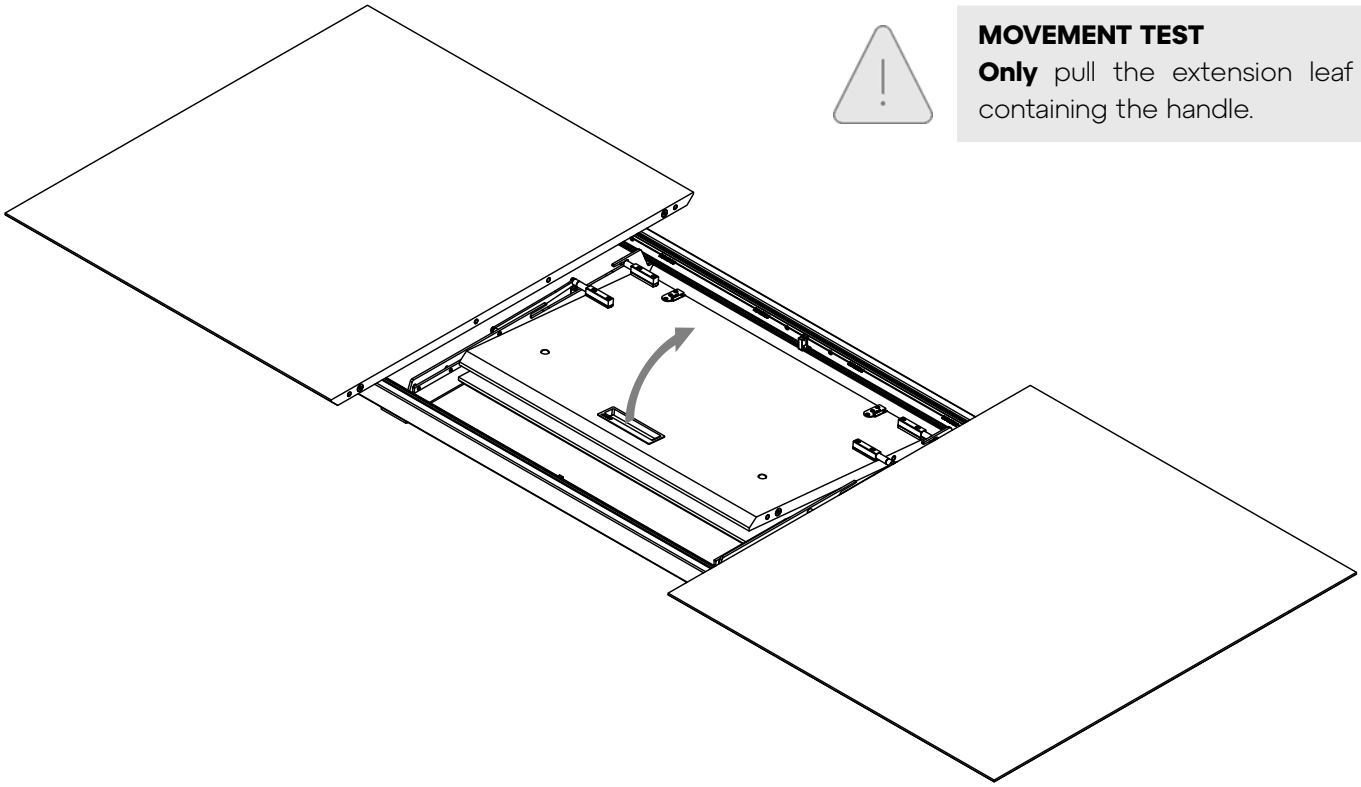

MOVEMENT TEST
Only pull the extension leaf containing the handle.

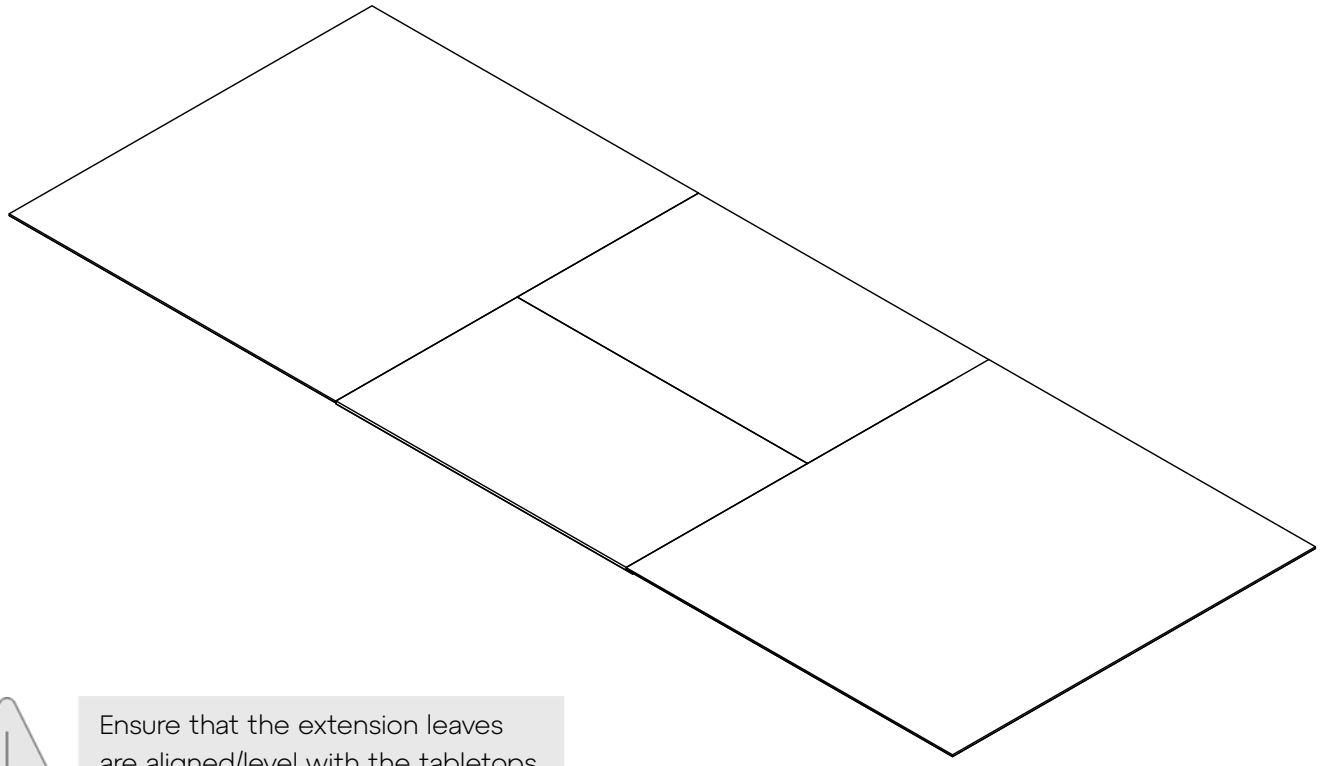



Ensure that the extension leaves are aligned/level with the tabletops.


UNIVERSAL


MOVEMENT TEST

Only pull the extension leaf containing the handle.

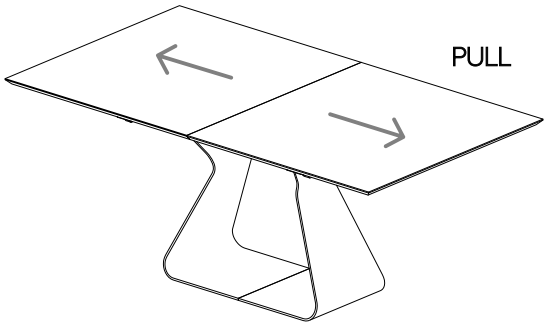

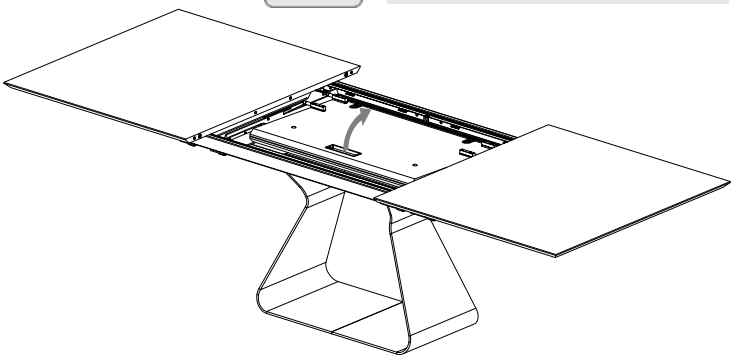

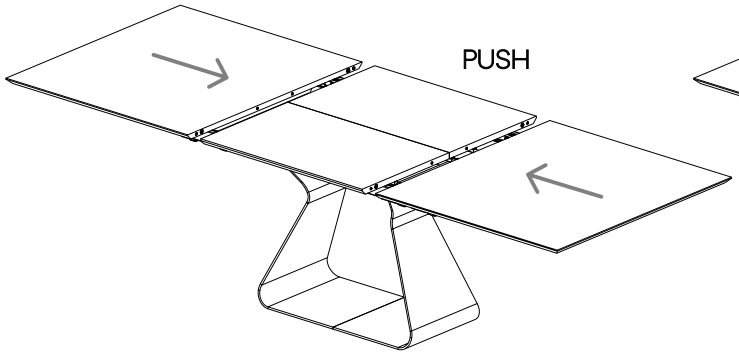

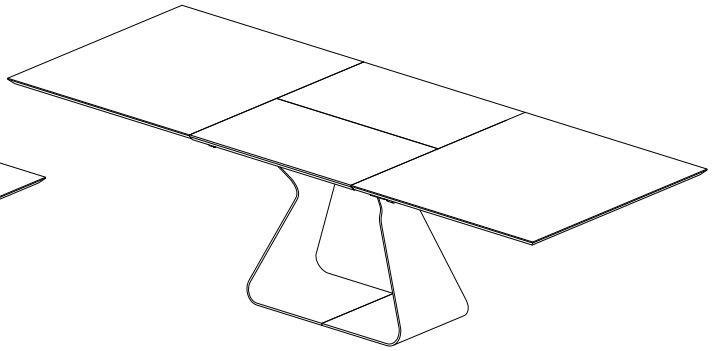

Use the handle on the extension leaf to close them.

